

a damp cloth and washingup liquid. Replace the filter cassette and press it upwards so that it clicks into place.

3.2.2. CHANGING THE FLUORESCENT TUBE

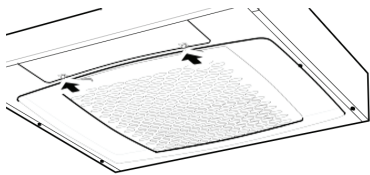 



Fig. 7

The lamp lens can be removed by pressing the snap retainers in the direction shown by the arrow; see Fig. 7. The fluorescent tube is now accessible for replacing.

4. WARRANTY

1. All equipment manufactured in our factory is checked in operating conditions and tested befor delivery. Test protocol is supplied together with the unit. The equipment is shipped in good working order and condition to the direct client. The unit is warrantied for the period of 24 month from the invoice date.
2. If equipment is found to have been damaged during transportation, a claim should be made against carrier, as we assume no responsibility for such damage.
3. This warranty does not apply:
 - 3.1. when transportation, storage, installation and maintenance instructions of the unit are violated;
 - 3.2. when the equipment is improperly maintained, mounted - inadequate maintenance;
 - 3.3. when the equipment without our knowledge and permission has been upgraded or unskilled repairs were made;
 - 3.4. when the unit was used not for its original purpose.
 - 3.5. Company SALDA UAB is not responsible for potential loss of property or personal injury in cases where AHU is manufactured without a control system and the control system will be installed by the client or third parties. The manufacturer's warranty does not cover devices that will be damaged by installing the control system.
4. This warranty does not apply at these malfunction cases:
 - 4.1. mechanical damage;
 - 4.2. damage caused by entering outside objects, materials, liquids;
 - 4.3. damage caused by natural disaster, accident (voltage change in the electricity network, lightning, etc..).
5. The company assumes no liability for its products either directly or indirectly damage, if the damage is caused by failure to comply with installation and mounting regulations, deliberate or careless users or third-party behavior.

These conditions are readily discernable when the equipment is returned to our factory for inspection.
If the direct client determines that equipment is found to be faulty, or a break-down occurred, he should inform the manufacturer within five working days and deliver the equipment to manufacturer. Delivery costs should be covered by customer.

 **Manufacturer reserves the right to change this technical passport any time without prior notice, if some typographic errors or inaccurate information is found, as well as after improving the apps and/or the devices. Such changes will be included in the new issues of the technical passport. All illustrations are just for information and thus may differ from the original device.**

4.1. LIMITED WARRANTY COUPON

Warranty term
24-month warranty*

I received complete package and technical manual of the product ready for usage. I have read warranty terms and conditions and agree with them:

.....
Customer's signature

*refer to WARRANTY CONDITIONS

Dear User, we appreciate your choice and do hereby guarantee that all ventilation equipment manufactured by our Company is inspected and thoroughly tested. An operational and high-quality product is sold to the direct buyer and

COOKER HOOD FOR SMARTY 2R UNIT

EN OPERATING INSTRUCTIONS



Regainės g. 100
Siauliai LT-78109, LITHUANIA
+370 41 540 415 office@saldai.lt



shipped from the territory of the factory. It is provided with a 24-month warranty since invoice issue date.
Your opinion is important to us, thus we always look forward to hearing your comments, feedback, or suggestions regarding technical and operational characteristics of the Products.
In order to avoid any misunderstandings, please read the instructions for installation and operation of the product as well as other technical documents of the product carefully. The number of the Limited Warranty Coupon and serial number of the product specified on the silver identification sticker attached to the housing must match.
The Limited Warranty Coupon shall be valid provided that the seller's stamps and records are clear. It is prohibited to change, delete, or rewrite the data specified on it in any manner – such a coupon shall be invalid.
With this Limited Warranty Coupon the manufacturer confirms one's obligations to implement the imperative requirements established by effective laws on protection of consumer rights in the event of identification of any defects of the products.
The manufacturer reserves the right to refuse provision of free warranty servicing in cases when the warranty conditions listed below are disregarded.

1. SAFETY INSTRUCTIONS

Carefully read these instructions of use and the installation guide, in particular the safety instructions, before you install and begin using the product. Save these instructions for later use or for the party who may take over the product after you.

Make sure you unplug the product prior to any form of cleaning or care.

Diversion of exhaust air shall be carried out in accordance with instructions issued by the appropriate authority.

Exhaust air may not be directed into flues that are used for fumes from, for example, gas, wood or oil-burning stoves, fireplaces, etc.

The distance between the cooker and the product must be at least 40 cm. For gas cookers, the distance should be increased to 65 cm. If a higher mounting height is recommended by the gas cooker manufacturer, this should be taken into account.

In order to avoid a potential hazard, installation, replacement of cables or other types of connection should be carried out by a qualified professional. Flambéing underneath the product is not allowed.

There must be sufficient air in the room when the hood is to be used at the same time as products that use energy sources other than electricity, i.e., gas hobs, gas, wood or oil-burning stoves or fireplaces, etc.

The product may be used by children from 8 years of age and persons with mental, sensory or physical impairment, or a lack of experience and knowledge, if they are informed on how the product is to be used.

Children should not be allowed to play with the product. Cleaning and maintenance of the product must not be performed by children without supervision.

Accessible parts of the product may become hot in conjunction with cooking. The risk of a fire spreading increases if cleaning is not carried out as often as is recommended.

2. INSTALLATION

Cooker hood for mounting under unit. The cooker hood is equipped with a fluorescent tube and polyester filter. Installation, use, care, maintenance etc., are described in these instructions.

2.1. TECHNICAL INFORMATION

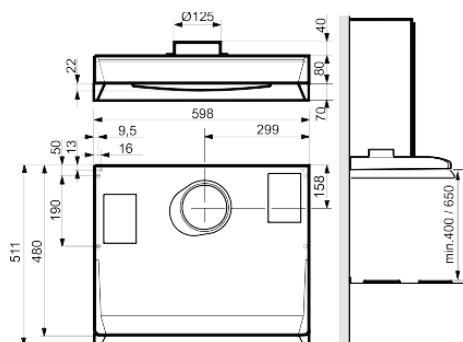 


Fig. 1

Width	60 cm
Other measurements	see Fig. 1
Electrical installation	230 V ~ earthed
Lighting	Fluorescent tube 11 W, socket 2G7

2.2. INSTALLATION

Fixing parts, screws for mounting, etc., are supplied with the cooker hood.

2.2.1. INSTALLING THE DAMPER.

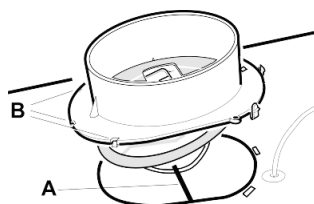 


Fig. 2

A duct connector with damper is provided inside the hood.

Position the damper axle "A" in the loop under the damper lid; see Fig. 2. Ensure that the clips "B" engage under the edge of the plate. Press the connector into position until the snap locks are fixed.

2.2.2. MOUNTING THE COOKER HOOD

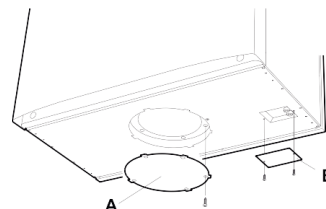 


Fig. 3

Unscrew the cover of the connecting sleeve, Fig. 3 A, and the electrical connections, Fig. 3 B.

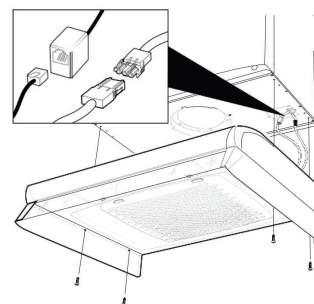 


Fig. 4

Connect the cooker hood cables to the unit, see Fig. 4. Mount the hood with four screws.

3. INSTRUCTIONS FOR USE

3.1. FUNCTION SWITCH

 


Fig. 5

A. Timer function for damper.

Press once. Damper remains open for 30 mins.

Press twice. Damper remains open for 60 mins.

Press three times: Damper remains open for 90 mins.

Press again. Damper closes.

The damper closes automatically after 30/60/90 minutes and the ventilation unit returns to normal ventilation, speed 2.

B. Lighting.

C. Speed of the ventilation unit's fans. No timing of selected speed except when using the timer function for the damper.

D. Fault indicator lamp.

If the fault indicator lamp glows or blinks, consult the user manual for the unit.

Open the damper while cooking. Adjust the speed of the ventilation unit's fans depending on the type of food you are cooking. It is a good idea to open the damper a short while before and after cooking, in order to avoid the spread of odours in the room.

3.2. CARE AND MAINTENANCE

3.2.1. CLEANING

The cooker hood should be cleaned with a damp cloth and washing-up liquid. The filter must be cleaned approximately twice a month, with normal usage.

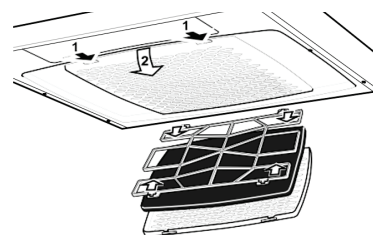 


Fig. 6

Remove the filter cassette by pressing on the clips on the front edge. Dismantle the filter cartridge and remove the filter cloth by loosening the retainer, Fig. 6. Squeeze the filter cloth in warm water mixed with washing-up liquid. The filter cassette (with filter) can also be washed in the dishwasher. The interior of the cooker hood should also be cleaned a few times a year. Wipe the interior with