

# AMBERAIR COMPACT RIS 1200-2500 P EKO 3.0

EN MOUNTING AND INSTALLATION INSTRUCTION



## 1. CONTENT

<b>1. CONTENT</b>	<b>2</b>
<b>2. SYMBOLS AND MARKING</b>	<b>3</b>
<b>3. SAFETY INSTRUCTIONS AND PRECAUTIONS</b>	<b>4</b>
<b>4. INFORMATION ABOUT THE PRODUCT</b>	<b>5</b>
4.1. DESCRIPTION	5
4.2. DIMENSIONS AND WEIGHT	5
4.3. TECHNICAL DATA	6
4.4. OPERATING CONDITIONS	8
4.5. STANDARD PACKAGE OF COMPONENTS	8
4.6. DESCRIPTION OF COMPONENTS	8
<b>5. INSTALLATION</b>	<b>9</b>
5.1. RECEPTION OF GOODS	9
5.2. TRANSPORTATION AND STORAGE	9
5.3. UNPACKING	9
5.4. PIPING AND INSTRUMENTATION DIAGRAM	10
5.5. MOUNTING	11
5.5.1. UNIT PLACING AND MOUNTING POSITIONING REQUIREMENTS	11
5.5.2. CEILING-MOUNTING OF THE UNIT	12
5.6. CONNECTION OF THE AIR DUCTS	12
5.7. CONNECTION OF THE UNIT TO ELECTRIC NETWORK	12
5.8. START-UP RECOMMENDATIONS	13
5.8.1. SYSTEM PROTECTION	13
5.8.2. PRE START-UP RECOMMENDATIONS OF THE UNIT (IN THE PRESENCE OF THE END-USER)	13
<b>6. MAINTENANCE</b>	<b>14</b>
6.1. SAFETY INSTRUCTION	14
6.2. GENERAL RECOMMENDATIONS FOR VENTILATION SYSTEM MAINTENANCE	14
6.3. COVER OPENING	14
6.4. FILTERS MAINTENANCE	15
6.5. FAN MAINTENANCE	15
6.6. HEAT EXCHANGER AND BYPASS DAMPER MAINTENANCE	15
6.7. HEATER MAINTENANCE	16
6.8. CONTROL BOARD MAINTENANCE	16
<b>7. CONTROL</b>	<b>17</b>
7.1. DEVICE CONTROL	17
7.2. DEVICE FUNCTIONS	17
<b>8. CONNECTION OF ACCESSORIES</b>	<b>18</b>
8.1. FIRE PROTECTION SIGNAL INPUT (FIRE PROTECTION INPUT (NC))	18
8.2. EXTERNAL CO <sub>2</sub> /PRESSURE SENSORS	18
8.3. ROOM CO <sub>2</sub> TRANSMITTER INSTALLATION RECOMMENDATION	18
8.4. CO <sub>2</sub> CONCENTRATION ACCORDING TO PETTENKOFER LIMIT	19
8.5. CONNECTION OF SUPPLY AND EXTRACT AIR DAMPERS	19
8.6. CONNECTION OF REMOTE CONTROL PANEL OR MODBUS	20
8.7. WATER HEATER CIRCULATION PUMP AND VALVE ACTUATOR	20
8.8. RECOMMENDED SCHEME FOR CONNECTION OF INTERNAL AND EXTERNAL COMPONENTS	20
<b>9. POSSIBLE FAULTS AND TROUBLESHOOTING</b>	<b>27</b>
<b>10. ECODESIGN DATA TABLE</b>	<b>28</b>
<b>11. DECLARATION OF CONFORMITY</b>	<b>29</b>
<b>12. WARRANTY</b>	<b>30</b>
12.1. LIMITED WARRANTY COUPON	30



## 2. SYMBOLS AND MARKING



**Warning – pay attention**



**Additional information**

Apply the technical label on the unit (in an easily accessible location) or on the dashed location of the technical manual to keep the important information about the unit.

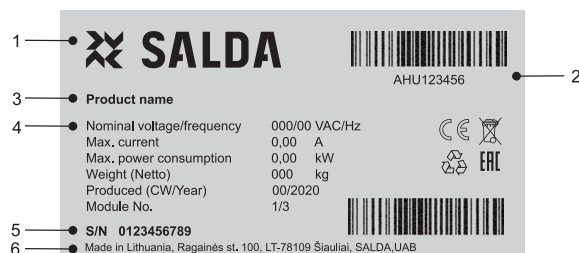


Figure 2.1. Technical label

1 - Logo; 2 - Product code (SKU); 3 - Product name; 4 - Technical data; 5 - Serial number; 6 - Production place.



Figure 2.2. Indication for duct connection.

ODA - outdoor air; SUP - supply air; ETA - extract air; EHA - exhaust air.

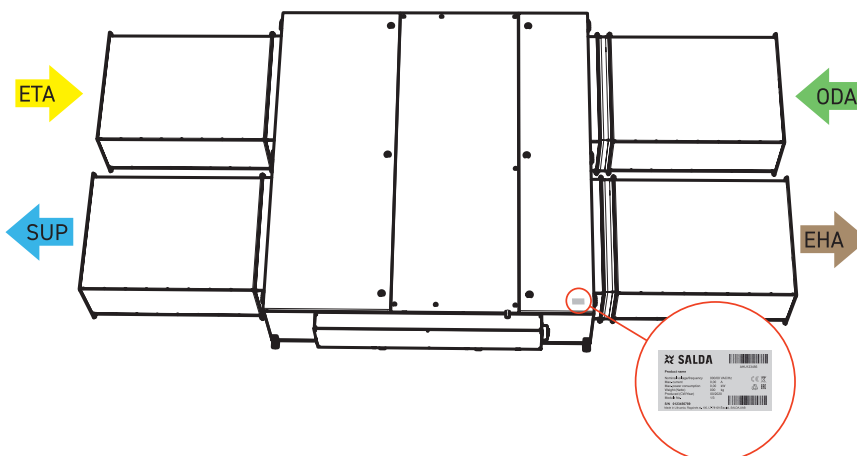


Figure 2.3. Technical label location and air duct indication



**NOTE. Ducts are not parts of the unit.**

### 3. SAFETY INSTRUCTIONS AND PRECAUTIONS

Read these instructions very carefully before installing and using this equipment. Installation, connection and maintenance should be carried out by a qualified technician and in accordance with local regulations and legislation.

The company shall take no responsibility for the injuries or damaged property if the safety requirements are not followed or the device is modified without the permission of the manufacturer.

#### Main safety rules

##### Danger



- Before carrying out any electrical or maintenance works, make sure that the device is disconnected from the mains and that all moving parts of the device have stopped.
- Make sure that the fans are not accessible through air ducts or branch openings.
- If any liquids on electric parts or connections that bear voltage are noticed, stop the operation of the device.
- Do not plug the device into the mains that differ from the one indicated on the label or on the housing.
- Voltage of the mains should comply with the electrotechnical parameters indicated on the label.
- The device should be earthed in accordance with the regulations on the installation of electric devices. Turning on and using an un-earthed device is not allowed. Follow the requirements specified on the device's labels that indicate danger.

##### Warnings



- Connection of electricity and maintenance of the device should be performed by qualified personnel only and in accordance with the manufacturer's instructions and safety requirements.
- In order to reduce the risk during installation and maintenance, suitable protective clothing must be worn.
- Beware of sharp angles while carrying out installation and maintenance works.
- Do not touch heating elements until they haven't cooled down.
- Some devices are heavy, you should be very careful while transporting and installing them. Use suitable lifting equipment.
- When connecting electricity to the mains, a circuit breaker of suitable size must be used.

##### Warning!



- If the device is installed in a cold environment, make sure that all connections and tubes are properly isolated. Intake and exhaust air ducts should be isolated in all cases.
- Openings of the ducts should be covered during transportation and installation.
- Make sure not to damage the coil when connecting the piping of the water coil. For tightening up, use a wrench/spanner.

##### Before starting up the device



- Make sure, that there are no strange objects inside the device;
- Manually check fans to make sure they are not stuck or blocked;
- Check the earthing;
- Make sure that all components and accessories are connected in accordance with the wiring diagram or provided instructions.

## 4. INFORMATION ABOUT THE PRODUCT

### 4.1. DESCRIPTION

AmberAir Compact RIS P EKO 3.0 is a non-residential air handling unit with a high efficiency (up to 82 %) counterflow heat exchanger. The unit supplies ventilation in premises and takes the heat from exhaust air. AHU complies with ErP 2018 requirements. The unit is operated by a separate remote control panel or through separate MB-Gateway by PC. Remote control panel and MB-Gateway are optional and not included in standard package.



Not suitable for operation in pools, saunas and other similar premises.

### 4.2. DIMENSIONS AND WEIGHT

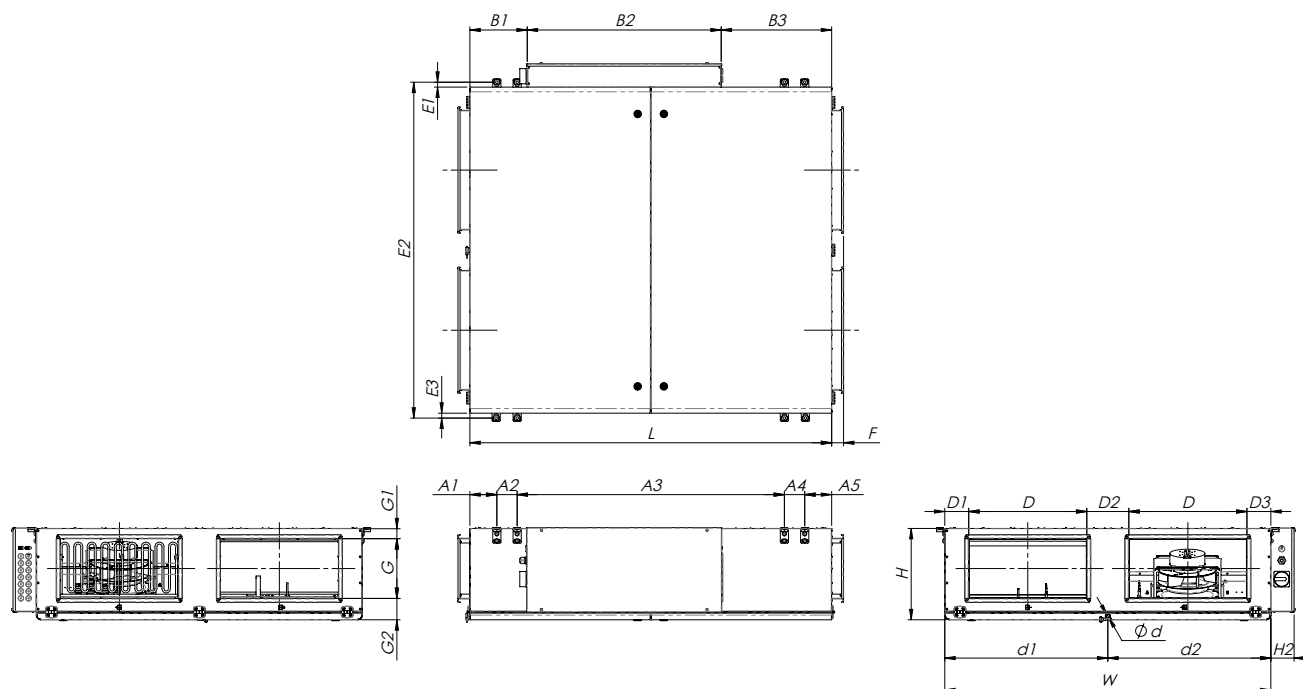


Figure 4.2.1. AmberAir Compact RIS 1200 P EKO 3.0

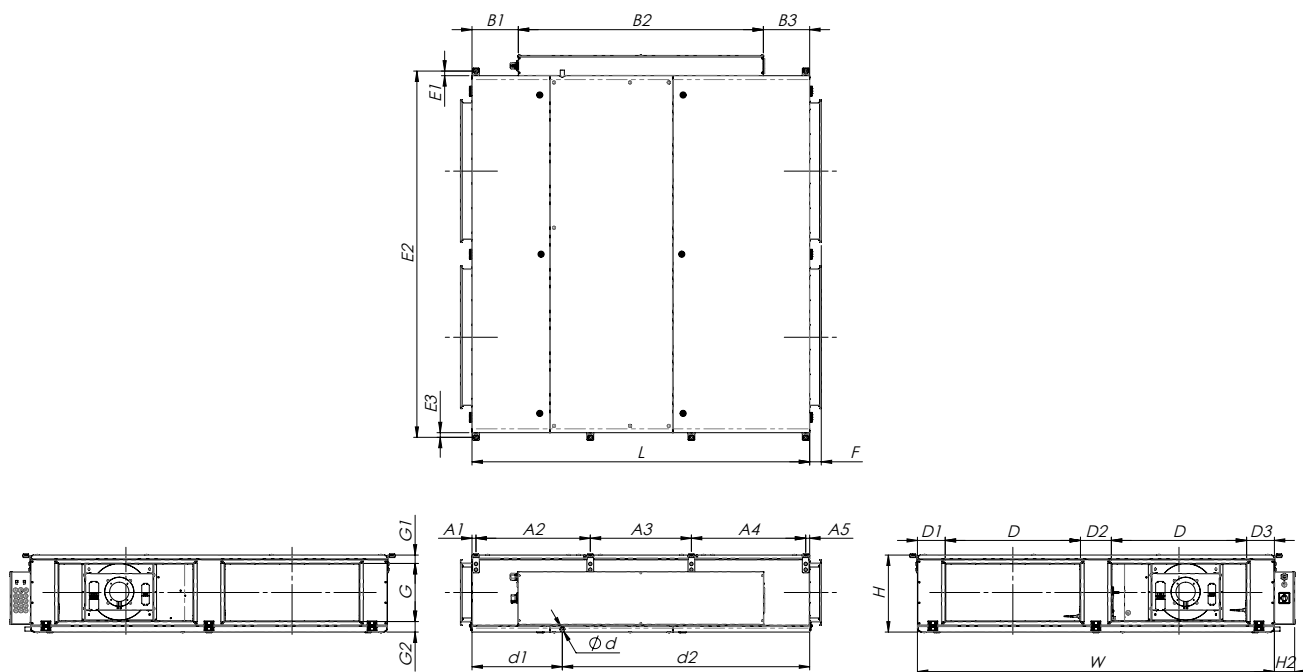


Figure 4.2.2. AmberAir Compact RIS 1900-2500 P EKO 3.0

AmberAir Compact RIS EKO 3.0		1200 PE 3.0	1200 PE 6.0	1200 PE 9.0	1200 PW	1900 PE 3.0	1900 PE 6.0	1900 PE 12.0	1900 PW	2500 PE 4.5	2500 PE 9.0	2500 PE 18.0	2500 PW
L	[mm]	1550				1750				1850			
W	[mm]	1397				1850				1950			
H	[mm]	391				400				500			
D	[mm]	500				700							
G	[mm]	250				300				400			
Ød	[mm]	16				21,3							
F	[mm]	51				60							
H2	[mm]	100				105							
A1	[mm]	115				21							
A2	[mm]	87				592				626			
A3	[mm]	1145				524				558			
A4	[mm]	87				592				626			
A5	[mm]	115				21							
B1	[mm]	246				240				290			
B2	[mm]	831				1270							
B3	[mm]	473				240				290			
D1	[mm]	102				144							
D2	[mm]	180				160				260			
D3	[mm]	102				144							
E1	[mm]	21				24							
E2	[mm]	1439				1898				1998			
E3	[mm]	21				24							
G1	[mm]	43				44							
G2	[mm]	91				55							
d1	[mm]	699				468				480			
d2	[mm]	699				1282				1369			
WEIGHT	[kg]	161		172	161	250		269	244	300			296

#### 4.3. TECHNICAL DATA

AmberAir Compact RIS EKO 3.0		1200 PE 3.0	1200 PE 6.0	1200 PE 9.0	1200 PW
<b>EXHAUST AIR FAN</b>					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,42/1,94	0,42/1,94	0,42/1,94	0,42/1,94
speed	[min <sup>-1</sup> ]	3350	3350	3350	3350
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP54	IP54	IP54	IP54
<b>SUPPLY AIR FAN</b>					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,42/1,94	0,42/1,94	0,42/1,94	0,42/1,94
speed	[min <sup>-1</sup> ]	3350	3350	3350	3350
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP54	IP54	IP54	IP54
Integrated electrical heater	[kW]	3,0	6,0	9,0	-
Total power/current consumption	[kW/A]	3,84/16,9	6,84/12,6	9,84/16,9	0,84/3,9
Automatic control integrated		PRV	PRV	PRV	PRV
Insulation of walls	[mm]	50			
Exhaust air filter (class, dimensions LxWxH)	[mm]	MPL 642x256x90 ePM10-55			
Supply air filter (class, dimensions LxWxH)	[mm]	MPL 642x256x90 ePM1-70			
Device protection class		IP-34			

AmberAir Compact RIS EKO 3.0		1900 PE 3.0	1900 PE 6.0	1900 PE 12.0	1900 PW
<b>EXHAUST AIR FAN</b>					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,5/2,2	0,5/2,2	0,5/2,2	0,5/2,2
speed	[min <sup>-1</sup> ]	2700	2700	2700	2700
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP55	IP55	IP55	IP55
<b>SUPPLY AIR FAN</b>					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,5/2,2	0,5/2,2	0,5/2,2	0,5/2,2
speed	[min <sup>-1</sup> ]	2700	2700	2700	2700
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP55	IP55	IP55	IP55
Integrated electrical heater	[kW]	3,0	6,0	12,0	-
Total power/current consumption	[kW/A]	4,0/17,4	7,0/13,0	13,0/22,4	1,0/4,4
Automatic control integrated		PRV	PRV	PRV	PRV
Insulation of walls	[mm]	50			
Exhaust air filter (class, dimensions LxWxH)	[mm]	MPL 892x338x46 ePM10-55			
Supply air filter (class, dimensions LxWxH)	[mm]	MPL 892x338x46 ePM1-70			
Device protection class		IP-34			

AmberAir Compact RIS EKO 3.0		2500 PE 4.5	2500 PE 9.0	2500 PE 18.0	2500 PW
<b>EXHAUST AIR FAN</b>					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,72/3,1	0,72/3,1	0,72/3,1	0,72/3,1
speed	[min <sup>-1</sup> ]	2800	2800	2800	2800
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP55	IP55	IP55	IP55
<b>SUPPLY AIR FAN</b>					
phase/voltage	[50 Hz/VAC]	1/230	1/230	1/230	1/230
power/current	[kW/A]	0,72/3,1	0,72/3,1	0,72/3,1	0,72/3,1
speed	[min <sup>-1</sup> ]	2800	2800	2800	2800
control input	[VDC]	0-10	0-10	0-10	0-10
protection class		IP55	IP55	IP55	IP55
Integrated electrical heater	[kW]	4,5	9,0	18,0	-
Total power/current consumption	[kW/A]	5,93/12,7	10,43/19,2	19,43/32,2	1,43/6,2
Automatic control integrated		PRV	PRV	PRV	PRV
Insulation of walls	[mm]	50			
Exhaust air filter (class, dimensions LxWxH)	[mm]	MPL 972x438x46 ePM10-55			
Supply air filter (class, dimensions LxWxH)	[mm]	MPL 972x438x46 ePM1-70			
Device protection class		IP-34			

Acoustic data: check the product page on [www.salda.it](http://www.salda.it)



**Not suitable for installation in living rooms: additional noise insulation required.**

#### 4.4. OPERATING CONDITIONS

AmberAir Compact RIS EKO 3.0	1200 P	1900 P	2500 P
Outdoor air temp. without frost protection	-2 .. 40 °C	-2 .. 40 °C	-2 .. 40 °C
Ambient air temp.	5 .. 40 °C	5 .. 40 °C	5 .. 40 °C
Min extracted air temp	15 °C	15 °C	15 °C
Max extracted air humidity	60 %	60 %	60 %
Max. ambient air humidity	80 %	80 %	80 %
Operation environment	indoor	indoor	indoor

#### 4.5. STANDARD PACKAGE OF COMPONENTS

AMBERAIR COMPACT RIS EKO 3.0	1200 P	1900 P	2500 P
Anti-vibration rubber 313508000	8	8	8
Key 291103	1	1	1
Hose 16x20 Crystal transparent	300 mm	-	-
Clamp with handle 16/27	1	-	-
Suspension bracket	-	8	8
Bolt 5 R DIN440	-	16	16
Spring washer 5 DIN127	-	16	16
Washer 5x20 DIN7985	-	16	16

#### 4.6. DESCRIPTION OF COMPONENTS

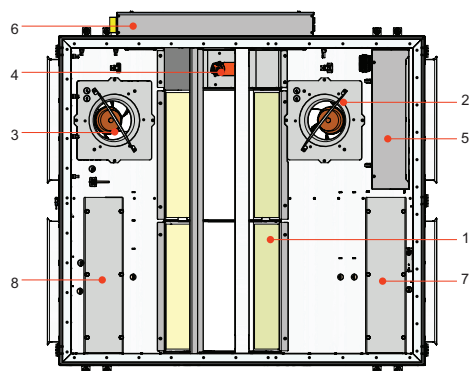


Figure 4.1. AmberAir Compact RIS 1200 P EKO 3.0

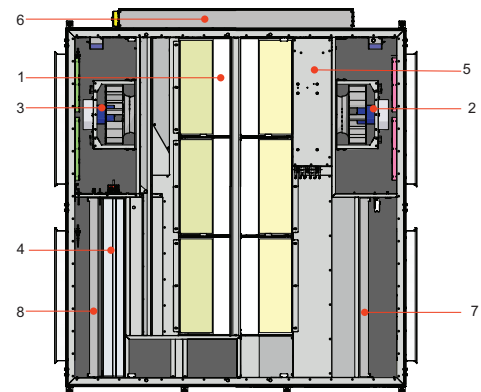


Figure 4.2. AmberAir Compact RIS 1900-2500 P EKO 3.0

1 - Plate heat exchanger; 2 - Supply fan; 3 - Exhaust fan; 4 - By-pass damper; 5 - Electrical/water heater; 6 - Control board;  
7 - Extract air filter (panel); 8 - Supply air filter (panel).


## 5. INSTALLATION

### 5.1. RECEPTION OF GOODS

Each device is carefully checked before transportation. When receiving the goods, checking the devices for any damage made during transportation is recommended. If any damage to the unit is observed, immediately contact the representatives of a transport company. Please inform the representative of the manufacturer, if any deviation of the device is noticed.

### 5.2. TRANSPORTATION AND STORAGE

- All units are factory-packaged to withstand normal conditions of transportation.
- When unpacking, check the unit for any damage made during transportation. Installing the damaged units is not allowed!
- The packaging is used for protection purposes only!
- When unloading and storing the units, use suitable lifting equipment to avoid damage and injuries. Do not lift units by holding on power supply cables, connection boxes, air extract or exhaust flanges. Avoid hits and shock overloads. Before installation, the units must be stored in a dry room with relative air humidity not exceeding 70 % (at +20 °C) and with an average ambient temperature ranging between +5 °C and +30 °C. The storage place must be protected against dirt and water.
- The units must be transported to the storage place or installation site using forklifts.
- The recommended storage period should not be longer than one year. In case of storing the units for a period longer than one year, checking if the fan bearings and motor rotate without difficulty (turning the impeller by hand) and if the electric circuit insulation is not damaged or the moisture has not accumulated must be performed before the installation of the unit.

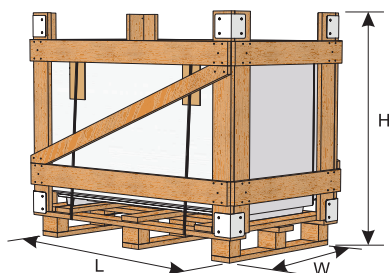

AmberAir Compact RIS EKO 3.0	H	W	L	Max. number of trans- ported packages
	[mm]	[mm]	[mm]	[pcs.]
1200 P	670	1585	1735	1
1900 P	2160	1100	1945	1
2500 P	2260	1200	2045	1

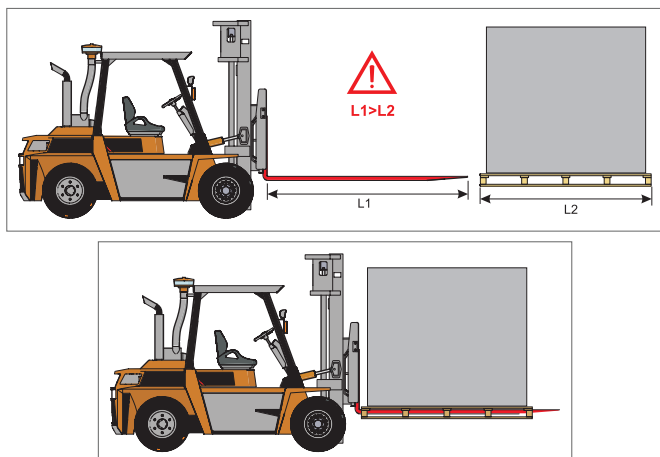


Figure 5.2.1. Lifting by forklift AmberAir Compact RIS 1200 P EKO 3.0

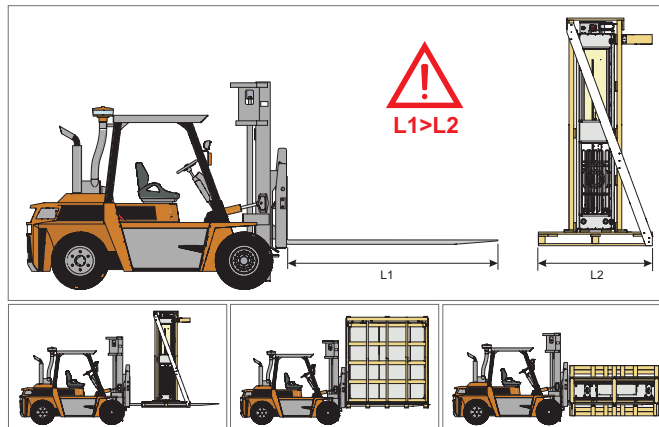


Figure 5.2.2. Lifting by forklift AmberAir Compact RIS 1900-2500 P EKO 3.0

**To prevent damage to the casing, only a product placed on a pallet should be lifted.**

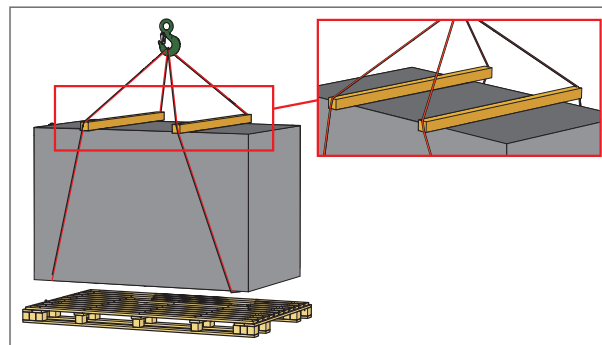


Figure 5.2.3. Lifting AmberAir Compact RIS 1200 P EKO 3.0

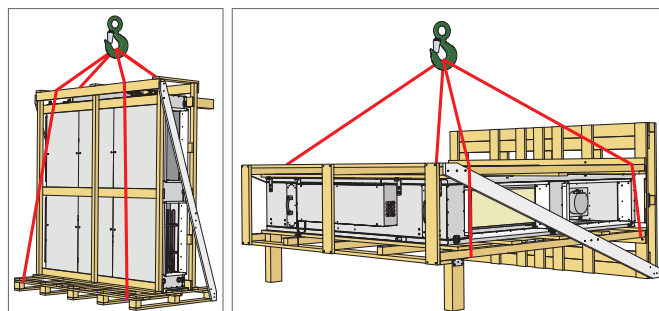


Figure 5.2.4. Lifting AmberAir Compact RIS 1900-2500 P EKO 3.0

### 5.3. UNPACKING



**Accessories may be packed together with the product. Prior to transporting the unit, the accessories should be unpacked first.**

- Remove the film from the unit.
- Remove the bracing packaging tape that keeps the protective profiles in place.
- Remove the protective profiles.
- After unpacking the unit, examine it to make sure that no damage was made during transportation. Installation of damaged units is not allowed!
- Before commencing the installation of the unit, please check if all ordered equipment has been delivered. Any deviation from the ordered equipment list must be reported to the product supplier.

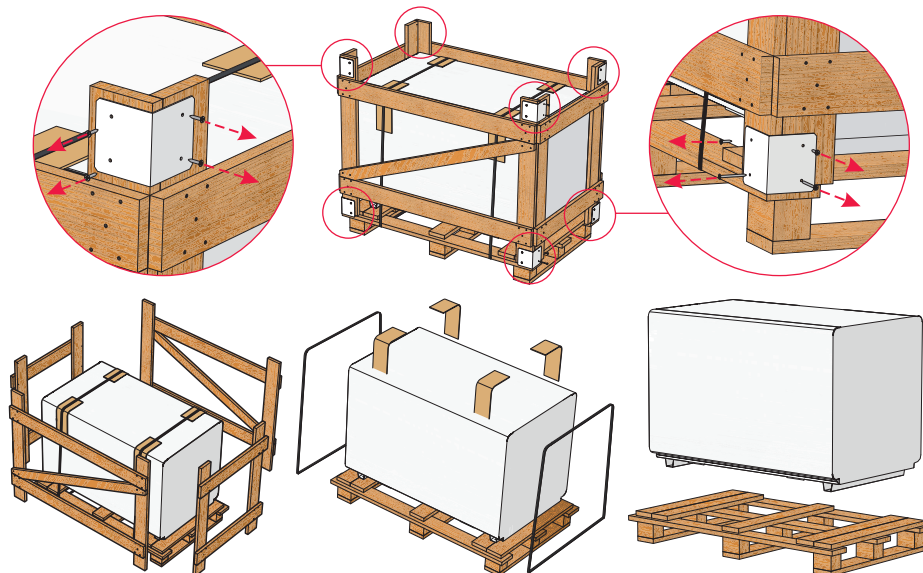


Figure 5.3.1. Unpacking AmberAir Compact RIS 1200 P EKO 3.0


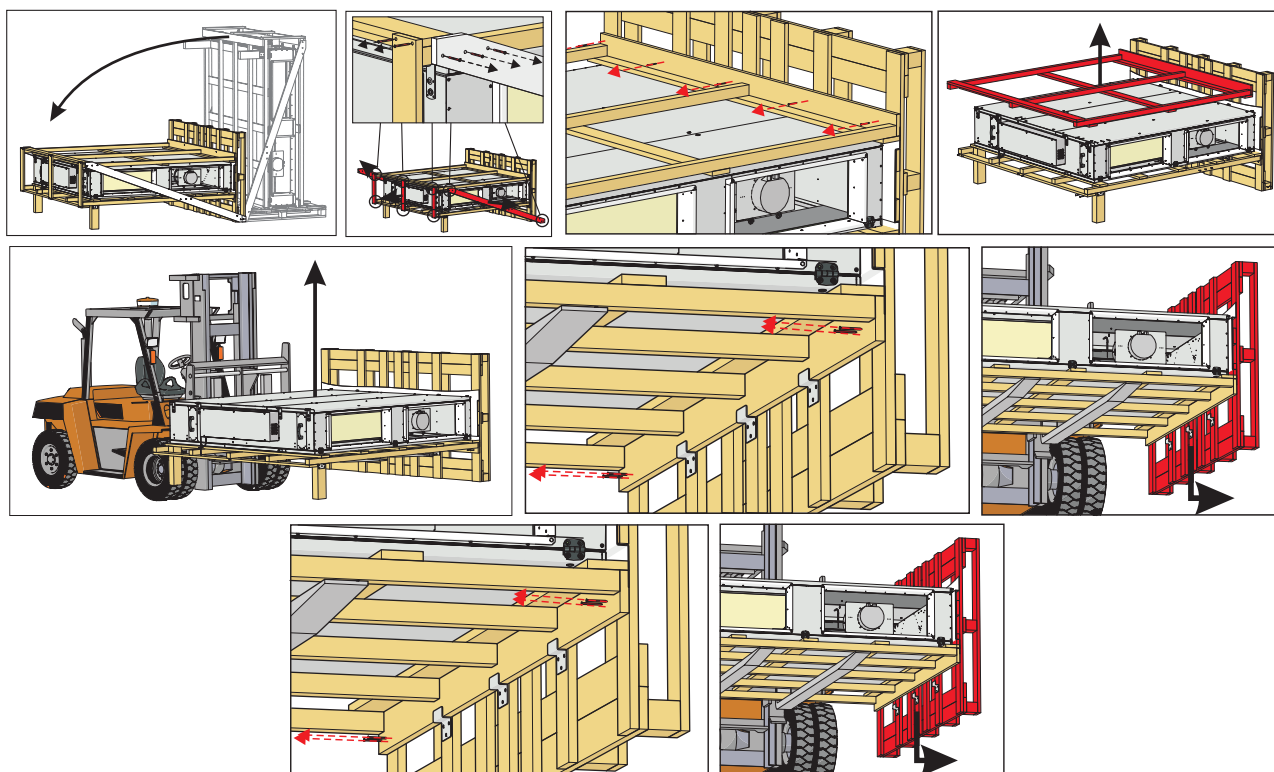


Figure 5.3.2. Unpacking AmberAir Compact RIS 1900-2500 P EKO 3.0


## 5.4. PIPING AND INSTRUMENTATION DIAGRAM



\* KE1 - only in electrical version; \* KV1 - used in water version; \*\* Possible to control.

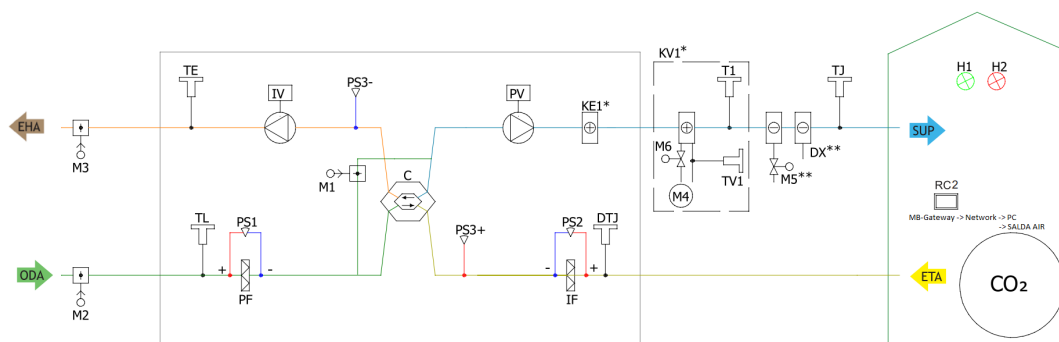

## THE LIST OF COMPONENTS

<b>C</b>	Plate heat exchanger	<b>PV</b>	Supply air fan
<b>IF</b>	Extract air filter	<b>PF</b>	Supply air filter
<b>IV</b>	Exhaust fan	<b>TE</b>	Exhaust air temperature sensor
<b>TJ</b>	Supply air temperature sensor	<b>DTJ</b>	Extract air temperature and humidity sensor
<b>CO<sub>2</sub></b>	CO <sub>2</sub> sensor	<b>PC</b>	Computer
<b>KE1</b>	Electric heater*	<b>M1</b>	By-pass damper
<b>M2</b>	Outdoor air damper actuator	<b>M3</b>	Exhaust air damper actuator
<b>TL</b>	Outdoor air temperature sensor		Ventilated premises
<b>NET</b>	Network	<b>MB-Gateway</b>	Network module
<b>DX</b>	DX cooler	<b>KV1</b>	Water heater*
<b>T1</b>	Water heater thermostat*	<b>M4</b>	Water heater circulation pump*
<b>M5</b>	Water cooler valve motor	<b>RC2</b>	Stouch, Flex or ST-SA-Control remote control panel
<b>M6</b>	Water heater valve motor*	<b>TV1</b>	Water heater temperature sensor*
<b>PS1</b>	Supply air filter differential pressure sensor	<b>PS2</b>	Extract air filter differential pressure sensor
<b>PS3</b>	Heat exchanger differential pressure sensor		

\* Component/possibility to connect it depends on model.

## POSSIBLE PCB INPUTS/OUTPUTS

<b>FA</b>	Fire alarm	<b>H1</b>	Working indication output
Fans speed switch (BOOST)		<b>H2</b>	Alarm indication output
System mode switch (START/STOP)			

## 5.5. MOUNTING

- Installation works should be carried out by qualified and trained staff only.
- When connecting air ducts, consider the labels on the casing of the unit.
- Before connecting to the air duct system, the connection openings of the ventilation unit should be closed.
- When connecting the ducts, the air-flow direction indicated on the device housing should be observed.
- Do not connect the bends close to the connection flanges of the unit. The minimum distance of the straight air duct between the unit and the first branch of the air duct in the supply air duct must be 1xD, in air exhaust duct 3xD, where D is the diameter of the air duct.
- It is recommended to use the brackets (accessories). This will reduce the vibration transmitted by the unit to the air duct system and environment.
- Sufficient space must be provided for opening the device door and filter covers.
- If the ventilation unit is a wall-mounted device, it may transmit noise vibrations to the premises. Though the level of noise generated by the fans is admissible, we recommend mounting the unit at a distance of 400 mm from the nearest wall. Where this is not possible, we recommend mounting the unit on the wall of the room where the level of noise is not significant.
- Ducts are connected to the unit in such a way that they could be easily disassembled, and the coil could be removed from the unit when carrying out maintenance, service and/or repair works.



The protective film is used to protect the unit during transportation. It is recommended to remove the film; otherwise, oxidation signs may occur.



Before every heating season, the condensate tube must be filled with water as indicated during the first start-up!

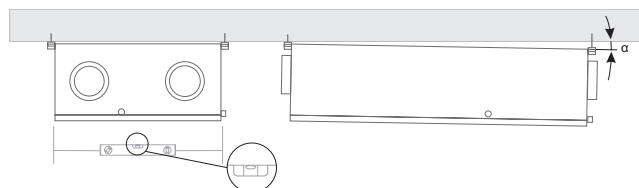


Figure 5.5.1. Ceiling-mounting positions ( $\alpha > 1^\circ$ )

\*The location of the condensate outlet for the specific product is indicated in the dimensional drawing

### 5.5.1. UNIT PLACING AND MOUNTING POSITIONING REQUIREMENTS

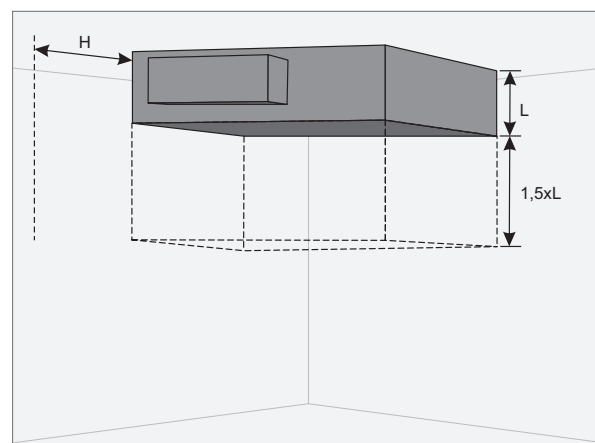


Figure 5.5.1.1. Min. distance to open the door - 1,5xL; Min. distance to open the control box door -  $H > 400$  mm.

## 5.5.2. CEILING-MOUNTING OF THE UNIT

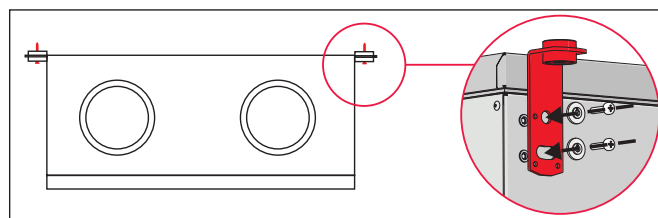


Figure 5.5.2.1. Ceiling-mounting of the unit

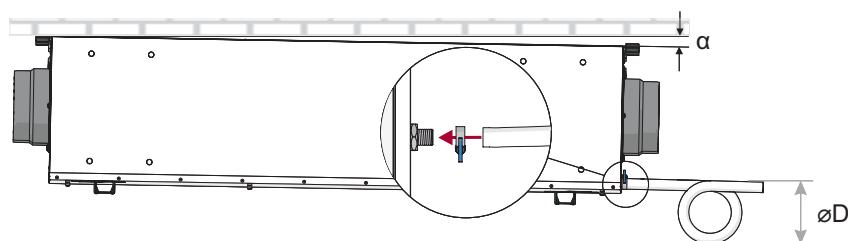


Figure 5.5.2.2. Drainage system installation (øD=150 mm)

The system should be connected to the pipe in the following order: AHU, siphon and sewerage system. The pipe should have a 3° degree slope (1 meter of pipe must have a 55 mm slope downwards)! Before turning on AHU, the draining system should be filled up with at least 0.5 l of water (siphon must be always filled with water), also check if water reaches sewerage system! Otherwise, the premises can be flooded. Draining system must be installed in the premises where the temperature is not lower than 0°C. If the temperature falls below 0°C, the draining system should be insulated with thermal insulation.



**NOTE.** If the collector is located upstream, install the system with the condensate pump (offered as an accessory).

## 5.6. CONNECTION OF THE AIR DUCTS

- The connected air ducts must not be bent and must be fixed separately.
- Make sure that the fans may not be accessed through air duct heads. Otherwise, a protective grid should be installed. You may choose the grid from the range of products provided on our website <https://select.salda.it>.
- Do not reduce the diameter of the piping near the air inlet or exhaust ducts. If you want to reduce the airflow speed in the system, also to reduce pressure and noise level, you can increase the diameter.
- In order to reduce the level of noise in the air supply system, install silencers (see the chapter on air supply system installation).
- In order to reduce air loss in the system, the air ducts and profile components should be of class C or higher. The catalogue of the above-mentioned items can be found on our website <https://select.salda.it>.
- External air and exhaust system piping should be isolated in order to prevent heat loss and condensation.
- We recommend to maintain a distance of up to 8 meters between air intake and air exhaust ducts. The air intake point should be installed away from potential air pollution sources.
- When installing air ducts next to the ventilation equipment, brackets must be used. They suppress vibrations and assure secure installation of the various system parts. The necessary brackets can be found in our catalogue or on our website <https://select.salda.it>.
- Air ducts are often mistakenly connected in an inappropriate location. The ventilation units bear the labels indicating the correct air duct connection layout. Before starting up the system, carefully check if all related works have been performed properly.



For flange diameters see chapter "DIMENSIONS AND WEIGHT".

## 5.7. CONNECTION OF THE UNIT TO ELECTRIC NETWORK

- Supply voltage to the unit must be connected by a qualified specialist following the manufacturer's instructions and applicable safety guidelines.
- The unit's power network voltage must correspond to the electro-technical specifications of the unit indicated in the technical decal.
- The unit's voltage, power and other technical specifications are provided in the unit's technical decal (on the unit casing). The unit must be connected to the voltage plug socket of the grounded power network in accordance with the applicable requirements.
- The unit must be earthed according to electrical equipment installation regulations.
- Using extension wires (cables) and power network plug socket distribution devices is not allowed.
- Prior to carrying out any ventilation unit installation and connection works (before the unit is commissioned), the unit must be disconnected from the power network.
- After installation of the ventilation unit, the power network plug socket must be accessible at any time. If the unit is equipped with circuit breaker, disconnection from the power network is performed through the two-pole or four-pole circuit breaker (by disconnecting phase poles and neutral).
- Before it is connected to the power network, the unit must be carefully checked for any damage (operation, control, and measurement nodes) made during transportation.
- The power cable can be replaced only by a qualified technician, after the evaluation of the rated power and current.



**The manufacturer does not assume any liability for personal injuries and property damage due to non-conformance with the provided instructions.**

## 5.8. START-UP RECOMMENDATIONS

### 5.8.1. SYSTEM PROTECTION

The control board of the unit is equipped with the following integrated devices for the protection against short circuit:

<b>AmberAir Compact RIS EKO 3.0</b>	<b>1200 PE 3.0</b>	<b>1200 PE 6.0</b>	<b>1200 PE 9.0</b>	<b>1200 PW</b>	<b>1900 PE 3.0</b>	<b>1900 PE 6.0</b>	<b>1900 PE 12.0</b>	<b>1900 PW</b>	<b>2500 PE 4.5</b>	<b>2500 PE 9.0</b>	<b>2500 PE 18.0</b>	<b>2500 PW</b>
<b>F1(Q3)</b>	16A	6,3A	6,3A	10A	16A	10A	10A	10A	10A	10A	10A	10A
<b>F2(Q2)</b>	20A	10A	16A	1A	20A	10A	20A	1A	10A	16A	32A	1A

It is recommended to use the unit with an external electrical protection device.

<b>AmberAir Compact RIS EKO 3.0</b>	<b>1200 PE 3.0</b>	<b>1200 PE 6.0</b>	<b>1200 PE 9.0</b>	<b>1200 PW</b>	<b>1900 PE 3.0</b>	<b>1900 PE 6.0</b>	<b>1900 PE 12.0</b>	<b>1900 PW</b>	<b>2500 PE 4.5</b>	<b>2500 PE 9.0</b>	<b>2500 PE 18.0</b>	<b>2500 PW</b>
<b>Mains Fuse</b>	25A	25A	25A	10A	25A	16A	25A	10A	16A	25A	40A	10A



**To ensure safe maintenance of the unit, it is necessary to turn off the main switch and/or external protection device.**

### 5.8.2. PRE START-UP RECOMMENDATIONS OF THE UNIT (IN THE PRESENCE OF THE END-USER)

Prior to start-up, the system must be carefully cleaned. Check for the following:

- Operation systems and unit elements as well as automation and automation devices were not damaged during installation,
- All electrical devices are connected to power supply and fit for service,
- All necessary automation elements are installed and connected to power supply and terminal blocks,
- Cable connection to terminal blocks comply with the existing wiring diagrams,
- All electrical equipment protection components are properly connected (if they are additionally used),
- Cables and wires correspond to all applicable safety and functional requirements, diameters, etc.,
- Earthing and protection systems are properly installed,
- Condition of all seals and sealing surfaces is proper.

## 6. MAINTENANCE

### 6.1. SAFETY INSTRUCTION



Unplug the unit from the mains before opening the door (disconnect the power plug from the outlet or in case an automatic circuit breaker is installed, disconnect it as well. Make sure that it cannot be turned on by the third parties) and wait until the fans completely stop (for about 2 min.).

### 6.2. GENERAL RECOMMENDATIONS FOR VENTILATION SYSTEM MAINTENANCE


In order to ensure the proper functioning of the system, maintenance requirements and its periods should be observed. Otherwise, the warranty shall be void. Some recommendations are provided in the table below, but they are just advisory, as the need for system maintenance depends on the location of the unit installation, the pollution of the atmosphere, population, working hours, etc.

COMPONENT	DURING START-UP	AT LEAST EVERY 6 MONTHS
Filters	Check the cleanliness of the filters	Replace filters every 3 to 4 months or according to the control device indications. Check cleanliness. Clean, if necessary. Make sure that the impellers are not unbalanced.
Fans	Check the connections and the direction of rotation	Make sure that the impellers do not cause noise when rotated by hand. Make sure that the fastening screws are not loose and free of mechanical damage. Check electrical connections and make sure that these are secured properly and are free of signs of corrosion.
Plate Heat exchanger	Check the cleanliness of the heat exchanger	Check cleanliness and clean, if necessary.
Control panel	Check the connections	Check the connections
Electric heater	Check the connections	Clean off dust, and check the electrical components and connections of the heater.
Pressure sensor	Check electrical connections	Check the operation.
Temperature sensor	Check electrical connections	Check the operation and tune up, if necessary
Air supply and extract system	Check the connections	Clean.
Air duct system	Check the tightness	Clean.
Dampers, diffusers, grid	Check the tightness of connections	Clean.
Switching unit (contactor)		Every 3 to 4 months, visually assess the functioning of the switching unit (contactor), i.e. make sure that its casing has no signs of melting or is not thermally damaged and does not produce any unusual sounds. All the contactors in the product or in its accessories must be checked.
Condensate trap and discharge assembly	Check the condensate discharge assembly and make sure that water runs from the bath properly	Clean.


### 6.3. COVER OPENING



Before opening the covers, first, unplug the unit from the mains, then wait for 2 minutes (until the fans completely stop).

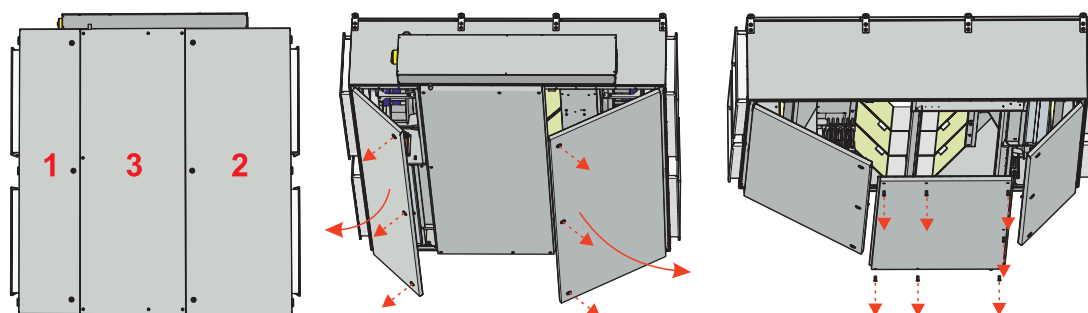

## 6.4. FILTERS MAINTENANCE

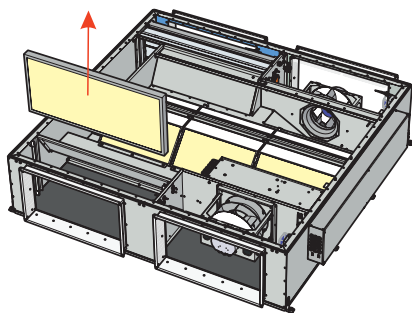

In order to remove the filters, open the door of the unit and take off the filters.

Dirt increases air resistance in the filter, therefore, a lower amount of air is supplied into the premises. Arrows on the filters must comply with the airflow direction.



**After changing the filters, please reload the filter timer. The instruction on reloading is provided in the control panel operation manual or on our website [www.salda.it](http://www.salda.it). Operation of the unit without filters is not allowed.**




**Change the filters every 3-4 months or according to the notification on the control device.**

- The fans features a heavy-duty ball bearing design. The motor is completely sealed and free of maintenance.
- Detach the fan from the unit.
- The impeller should be particularly checked for built-up material or debris that may cause an imbalance. An excessive imbalance may lead to accelerated wear on the motor bearings and cause vibration.
- Clean the impeller and inside the housing with a mild detergent and a damp soft cloth.
- Do not use high-pressure cleaners, abrasive materials and sharp tools or caustic solvents that may scratch or damage the housing and impeller.
- Do not plunge the motor in any fluid while cleaning the impeller. Make sure the impeller's balance weights are in place.
- Make sure the impeller is free of any obstacles.
- Install the fan back into the unit. Connect fan power and control connectors.
- In case the fan does not automatically start up or stop after maintenance, contact the manufacturer. The malfunction of the fan can be identified by the pressure in the system (when pressure switches are connected). In case of any fault in the fan motor, a notice will appear on the control panel.



**Prior to commencing any maintenance or repair works, make sure the unit is disconnected from the power source.**



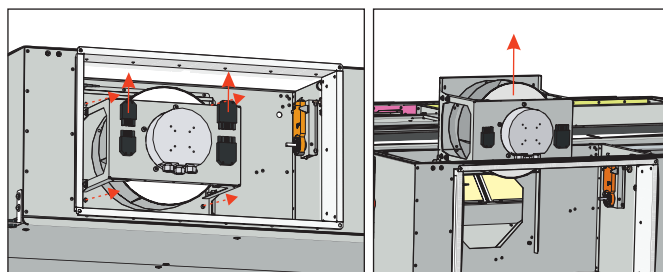


## 6.5. FAN MAINTENANCE






- Fan maintenance should be performed by experienced and trained staff only.
- The fan should be inspected and cleaned at least once per year.
- Proceed to maintenance and repair after any fan rotation is stopped.
- Observe staff safety regulations during the maintenance and repair works.

## 6.6. HEAT EXCHANGER AND BYPASS DAMPER MAINTENANCE

- Be sure to disconnect the unit from power source before performing any maintenance or repair.
- Proceed to maintenance and repair after any rotation in the fan stopped.
- Clean the heat exchanger once a year.
- Firstly take out heat exchanger cassette carefully. Submerge it into a bath and wash with warm soapy water (do not use soda). Then rinse it with weak hot water stream (too strong stream can fold the plates). Place back the heat exchanger only when it is completely dry.

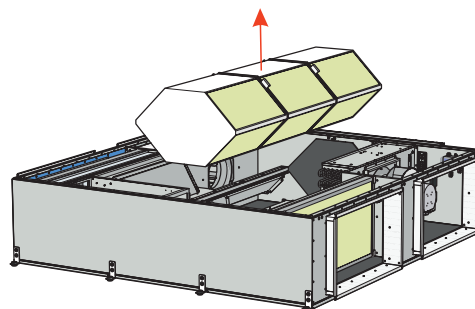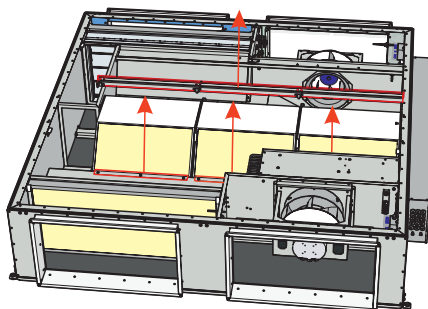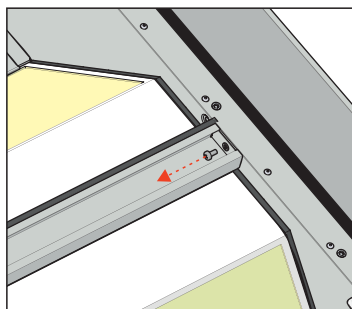


**CAUTION: the heat exchanger can not be used when the filters are removed!**

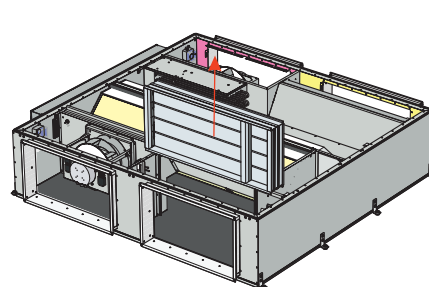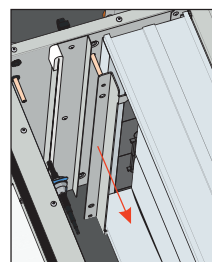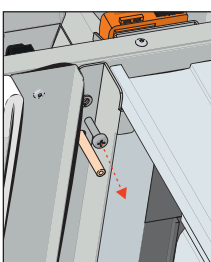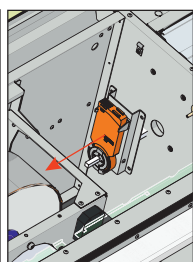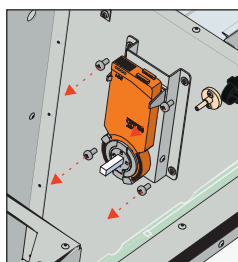


## 6.7. HEATER MAINTENANCE

- In case manual protection is activated, check for a fault before pressing the RESET button. If the fault is identified after it has been rectified, press the RESET button using a screwdriver or a similar object.
- Electrical heater does not require additional servicing.
- Heaters are equipped with 2 thermal protection devices: an automatic self-resetting protection device that is activated at +50 °C, and a manually restored protection device that is activated at +100 °C.
- After activation of the manually restored protection device, make sure that the unit is disconnected from the power supply. Wait until all heating elements cool down and the fans stop completely. After the failure is detected and rectified, press the RESET button before starting the unit. The failure can be identified by a qualified technician only.
- If necessary, the electric heater can be removed. Disconnect the electrical connector from the heater and remove the heater.

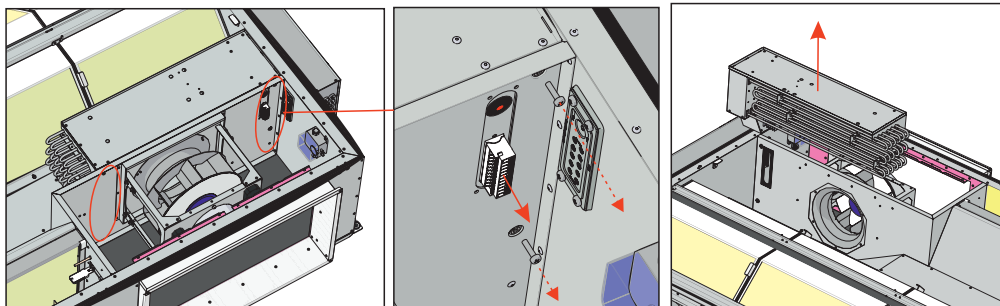

## 6.8. CONTROL BOARD MAINTENANCE

- Disconnect product unit from electric power source.
- Unscrew the bolts on the control box.
- Remove the control box cover.
- Disconnect all cables, wires, and connectors from the control board and unscrew the control board mounting bolts.
- Remove the control board.
- To reassemble, follow all maintenance steps in reverse order. When re-connecting cables, wires, and connectors, make sure to match each wire and connector to the corresponding connection terminal and connector.

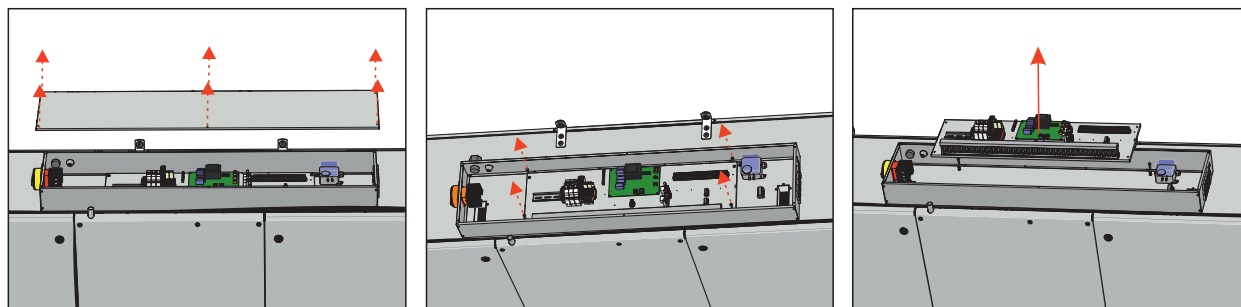

## 7. CONTROL

### 7.1. DEVICE CONTROL

Ventilation unit equipped with PRV control board can be controlled with remote controller, WEB interface or mobile app via MB-GATEWAY and BMS (building management system). More information provided in the table below.

With MB-GATEWAY	Remote control panels	BMS direct connection	Wireless communication
Web interface SALDA AIR mobile application BMS over Modbus TCP/IP BMS over BACnet TCP/IP	Stouch ST-SA-Control FLEX	Modbus RTU (RS485)	MB-GATEWAY + WIFI router

### 7.2. DEVICE FUNCTIONS

PRV control board operation functions and control of the device depends on the following:

1. Selected control interface (remote control panel, MB-GATEWAY and etc.). Chosen interface just affects access to the information and settings but not affects the logic of control. Full access to the information and settings are available on FLEX, ST-SA-Control, MB-GATEWAY WEB application and SALDA AIR mobile application.
2. Unit configuration (internal/external components, sensors and control board settings).




**Refer to the instruction manual of the existing control device for unit control instructions.**

## 8. CONNECTION OF ACCESSORIES

### 8.1. FIRE PROTECTION SIGNAL INPUT (FIRE PROTECTION INPUT (NC))


Fire protection signal input must be normally closed, until the fire protection system is not connected a jumper is installed in the factory.

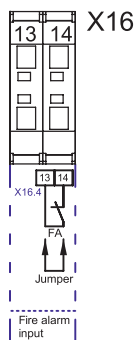

### 8.2. EXTERNAL CO<sub>2</sub>/PRESSURE SENSORS


AmberAir Compact RIS P EKO 3.0 units have two connections for external CO<sub>2</sub>/PRESSURE (input 0-10 VDC) sensors

**Sensors connection:**

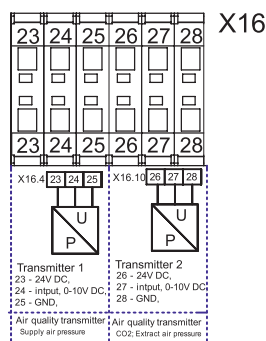

These sensors are intended for the following 3 functions: supply air pressure, extract air pressure and extract CO<sub>2</sub> detection. Supply air pressure is measured inside the supply air duct referenced to the unit's surrounding area. Extract air pressure is measured inside the extract air duct referenced to the unit's surrounding area. The CO<sub>2</sub> transmitter is installed in the extract air duct or room.


### 8.3. ROOM CO<sub>2</sub> TRANSMITTER INSTALLATION RECOMMENDATION

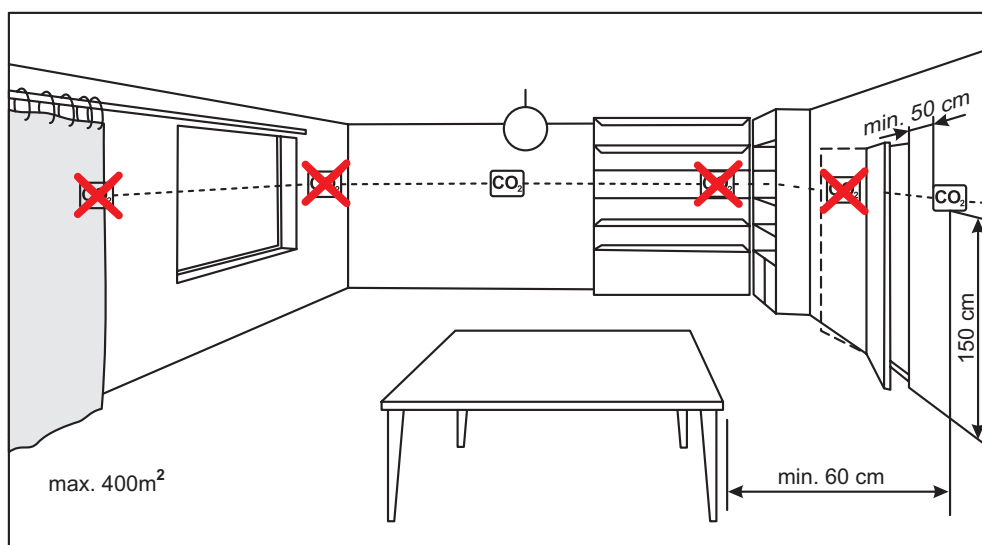

If the duct CO<sub>2</sub> transmitter is used, it must be installed in the extract air duct. To install duct transmitters, hole drilling tools are required.



## 8.4. CO<sub>2</sub> CONCENTRATION ACCORDING TO PETTENKOFER LIMIT

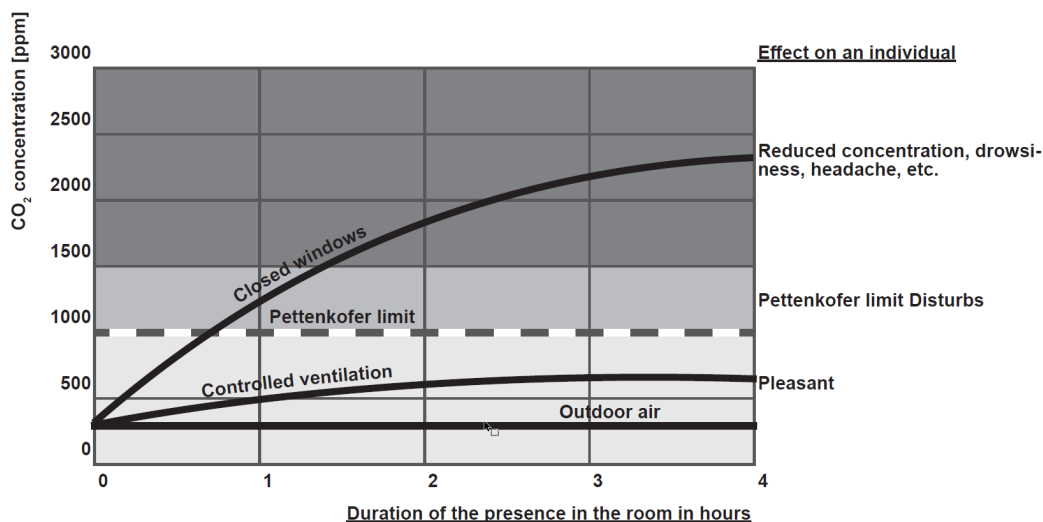


## 8.5. CONNECTION OF SUPPLY AND EXTRACT AIR DAMPERS

Product AmberAir Compact RIS P EKO 3.0 can be equipped with supply air and extract air dampers. Dampers are controlled by Open/Close or Spring-return actuators.


### Wiring diagram for AmberAir Compact RIS PE EKO 3.0

M2, M3 – Open/Close damper actuators. Upon activation of outputs X16:17, X16:20 the dampers shall open. Upon activation of outputs X16:16, X16:19 the dampers shall close.

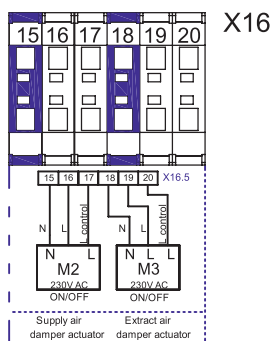


### Wiring diagram for AmberAir Compact RIS PW EKO 3.0

M2 – Spring-return damper actuator. M3 – Open/Close damper actuator. Upon activation of outputs X16:17, X16:20, the dampers open. Upon activation of output X16:19, the extract air damper close. The supply air damper is controlled by spring-return actuator so that when output X16:16 is deactivated, the supply air damper closes.

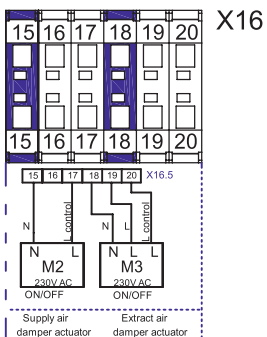

## 8.6. CONNECTION OF REMOTE CONTROL PANEL OR MODBUS

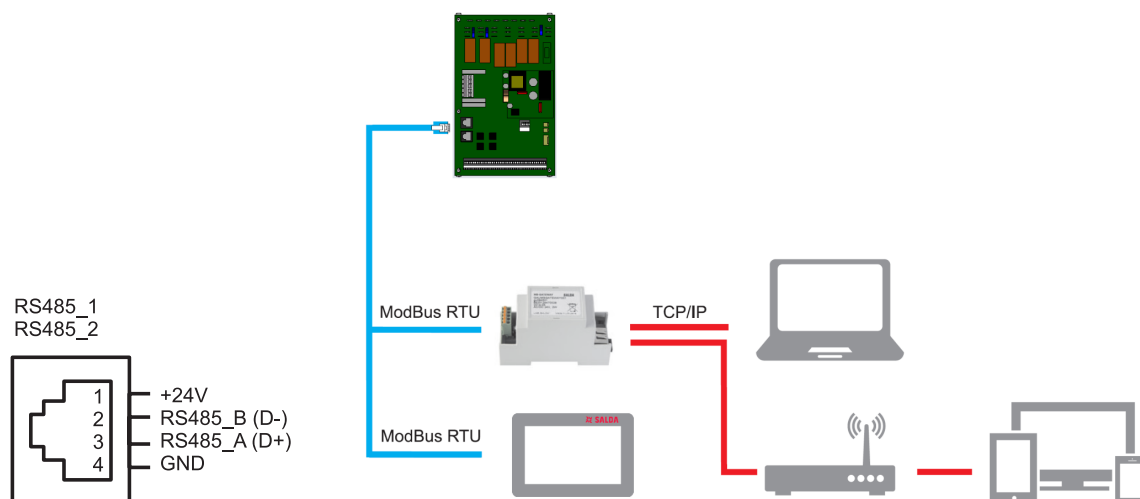


## 8.7. WATER HEATER CIRCULATION PUMP AND VALVE ACTUATOR

Water heater circulation pump and valve actuator can only be connected to the units that are designed to operate with water heater (AmberAir Compact RIS PW EKO 3.0 units).

### Wiring diagram

Valve actuator is controlled by 0-10 VDC signal. Circulation pump is controlled by On/Off signal.

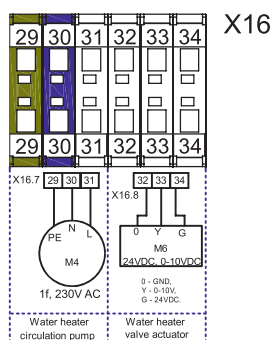

## 8.8. RECOMMENDED SCHEME FOR CONNECTION OF INTERNAL AND EXTERNAL COMPONENTS

<b>M1</b>	By-pass air damper actuator.	<b>PV</b>	Supply air fan EC.
<b>M2</b>	Outdoor air damper actuator.	<b>IV</b>	Exhaust air fan EC.
<b>M3</b>	Extract air damper actuator.	<b>PS1</b>	Supply air filter differential pressure sensor.
<b>M4</b>	Water heater circulation pump.	<b>PS2</b>	Extract air filter differential pressure sensor.
<b>M5</b>	Water cooler valve actuator.	<b>PS3</b>	Heat exchanger differential pressure sensor.
<b>M6</b>	Water heater valve actuator.	<b>FA</b>	Fire alarm.
<b>TL</b>	Outdoor air temperature sensor (TJK-10K).	<b>AT1</b>	Electric heater automatic protection.
<b>TJ</b>	Supply air temperature sensor (TJK-10K).	<b>RT1</b>	Electric heater manual protection.
<b>TE</b>	Exhaust air temperature sensor (TJK-10K).	<b>KE1</b>	Electric heater.
<b>DTJ100</b>	Extract air humidity and temperature sensor.	<b>RG1</b>	Controller PRV.
<b>TV</b>	Water heater temperature sensor.	<b>RG2</b>	Regulator ESKM1-26.
<b>T1</b>	Water heater thermostat.	<b>Q1</b>	Main switch.
<b>F1</b>	Fuse.	<b>Q2, Q3</b>	Automatic switch.
<b>R1</b>	Relay socket RT, relay RX		

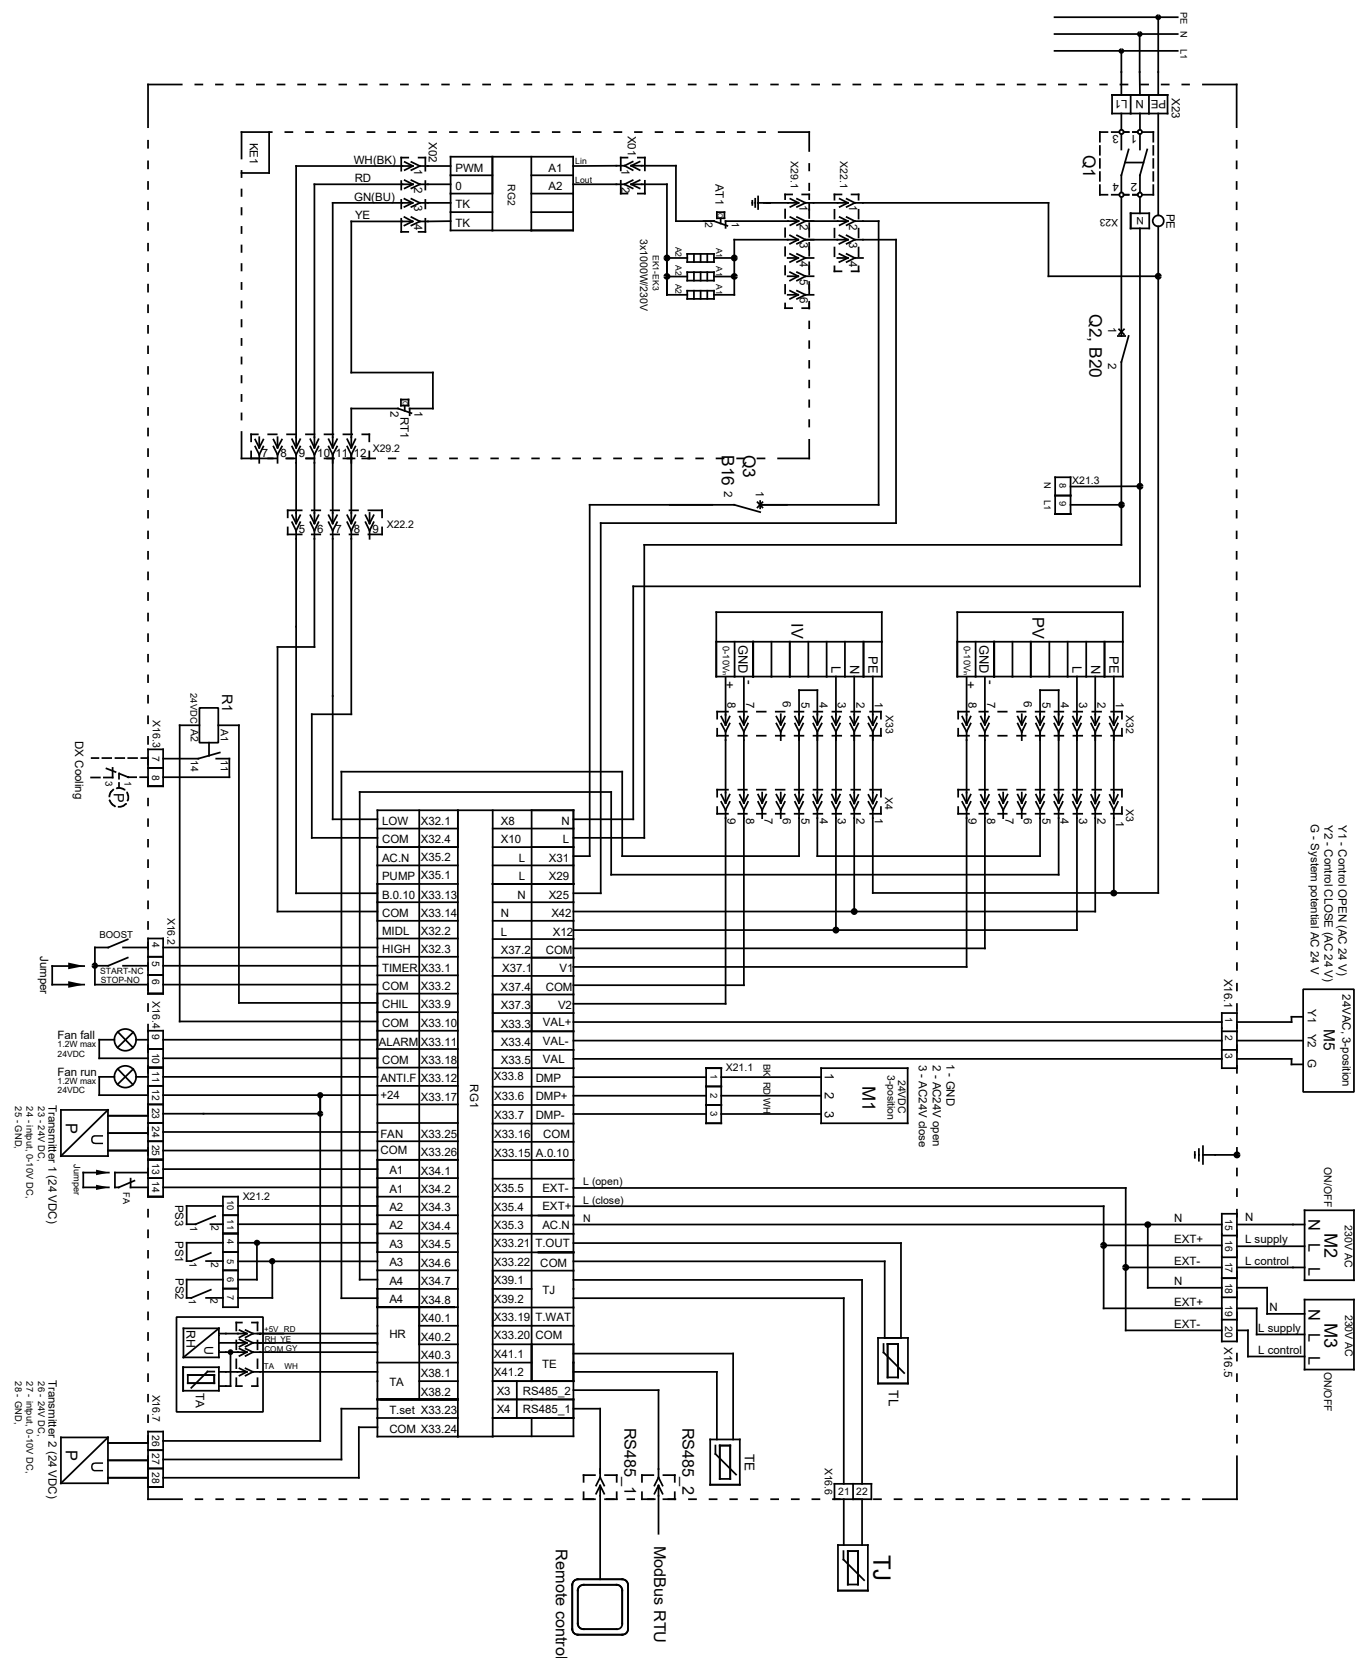


Figure 8.8.1. AmberAir Compact RIS 1200 PE 3.0 EKO 3.0

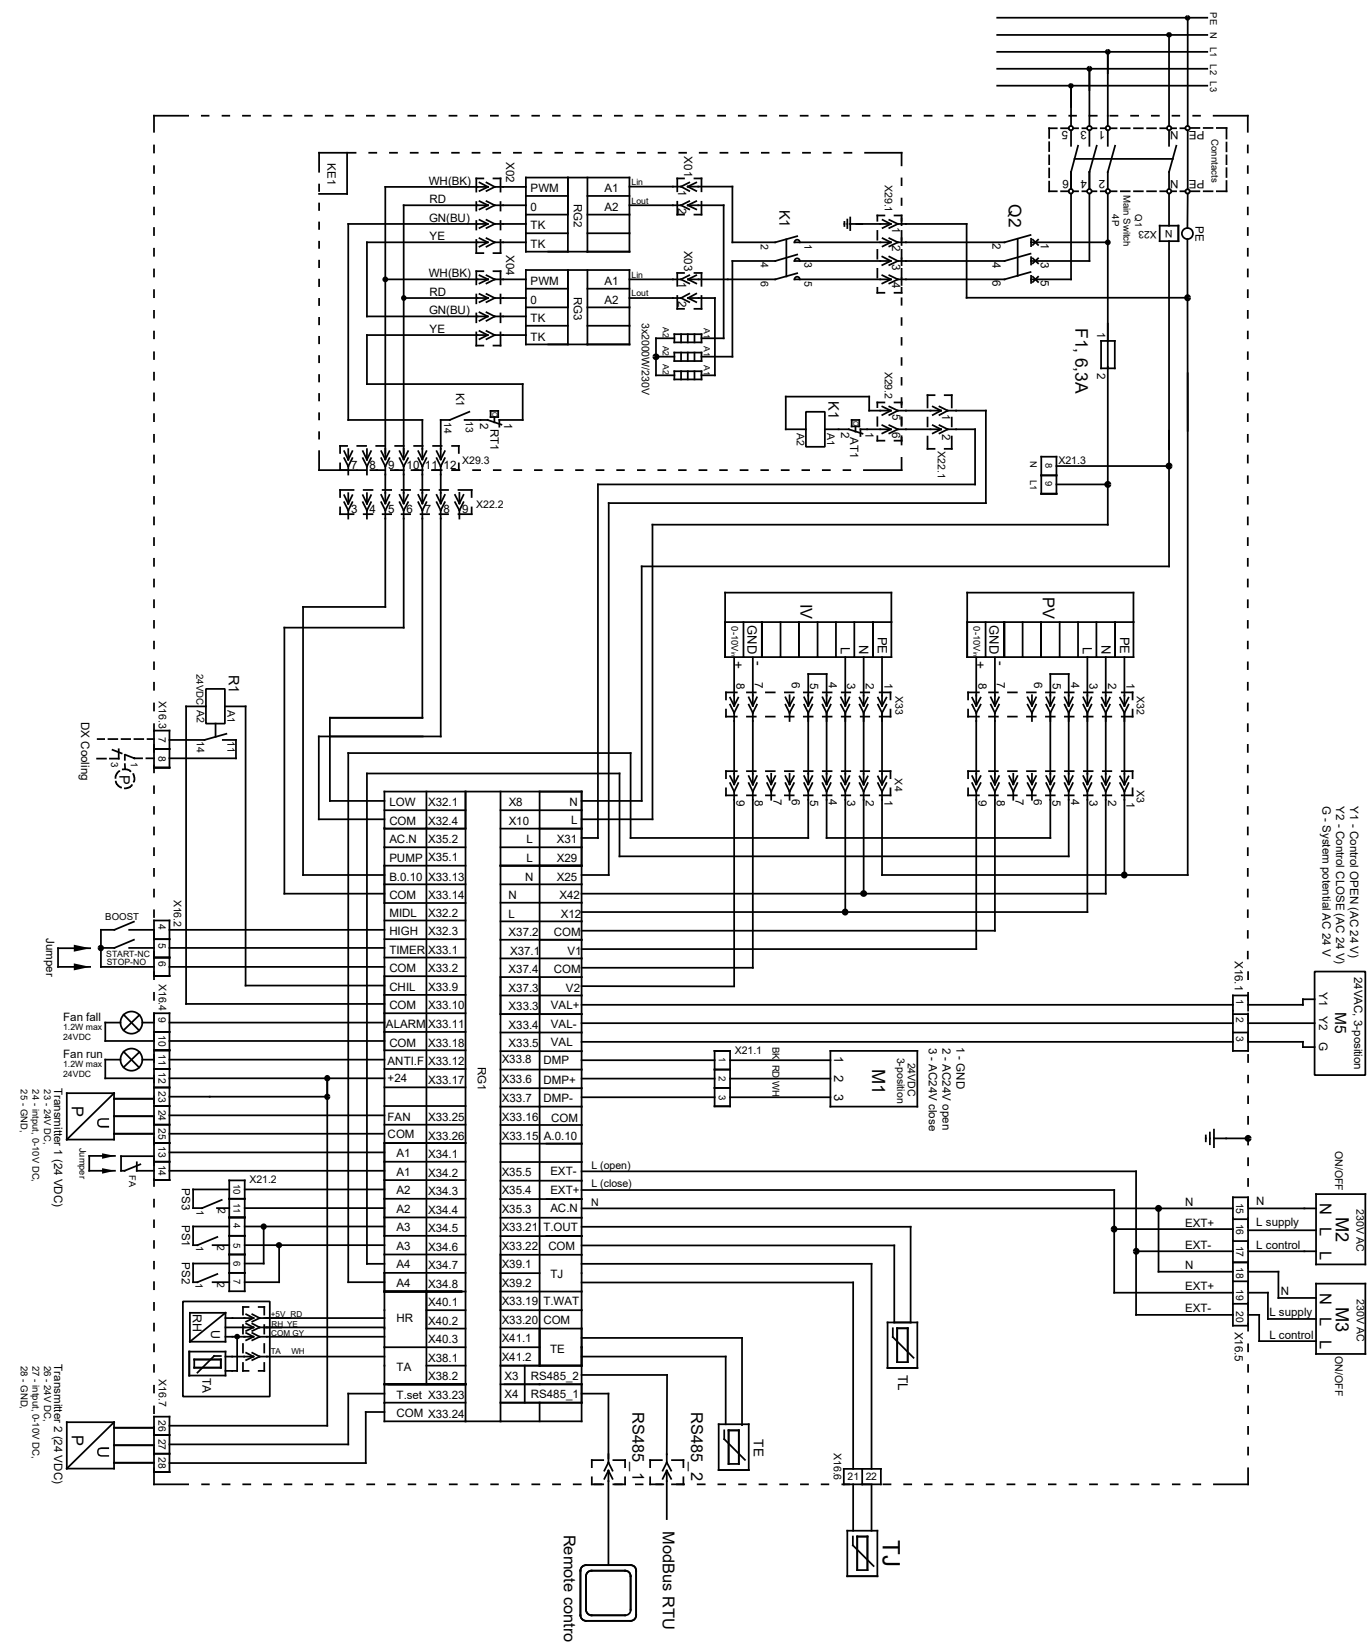


Figure 8.8.2. AmberAir Compact RIS 1200 PE 6.0/9.0 EKO 3.0

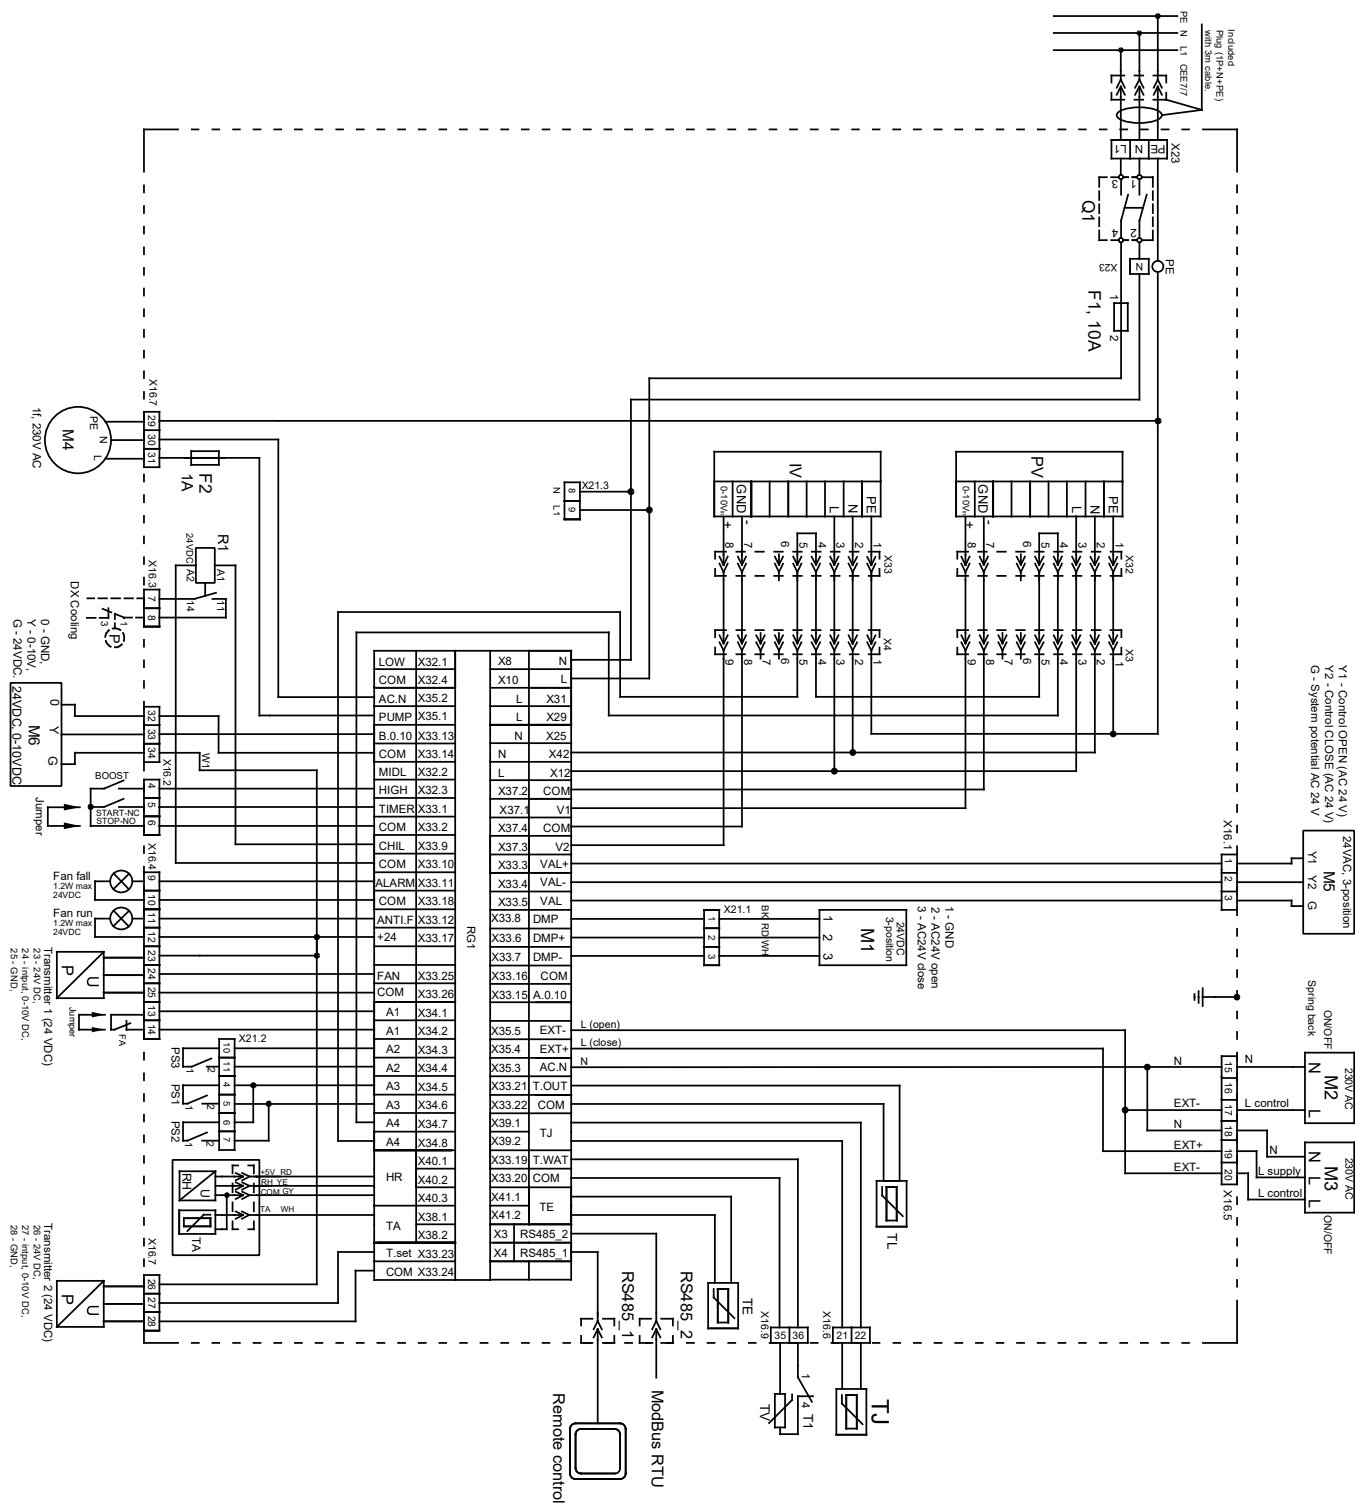


Figure 8.8.3. AmberAir Compact RIS 1200 PW EKO 3.0

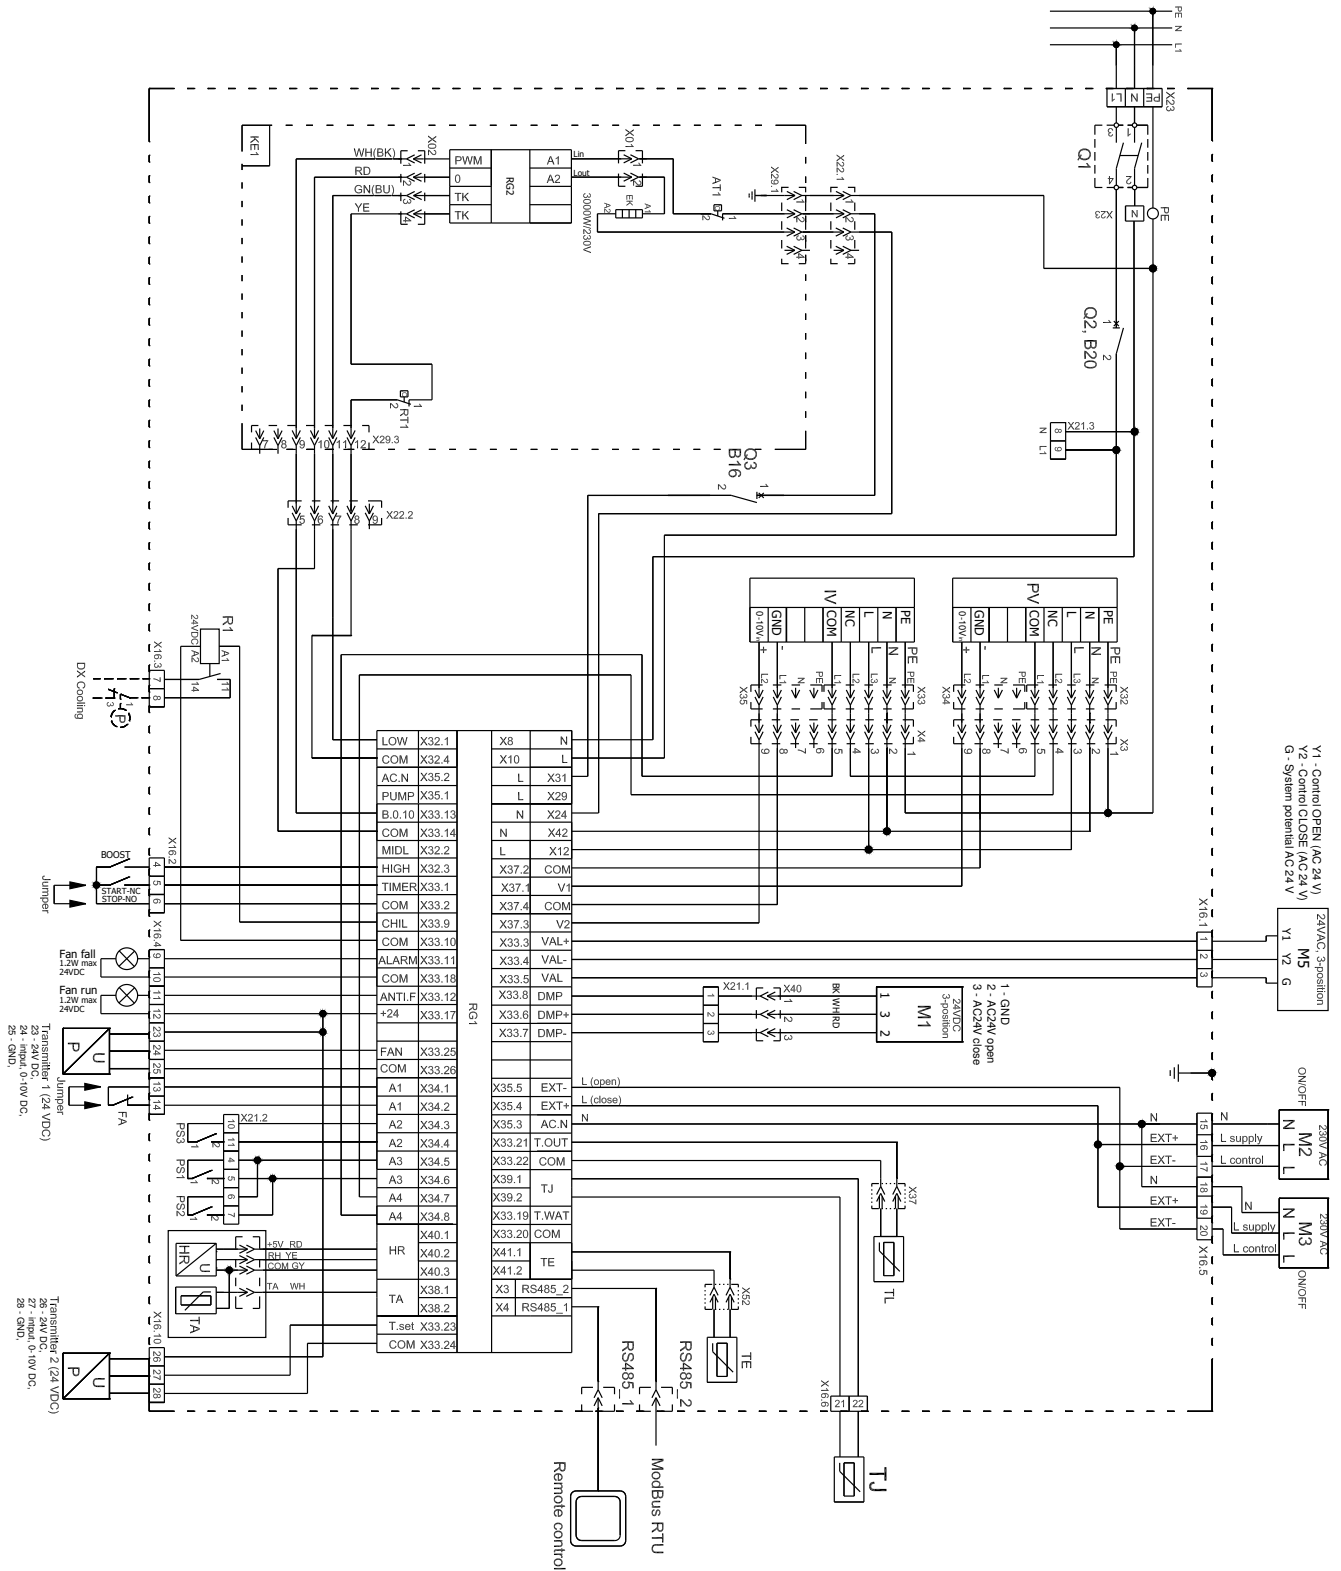


Figure 8.8.4. AmberAir Compact RIS 1900 PE 3.0 EKO 3.0

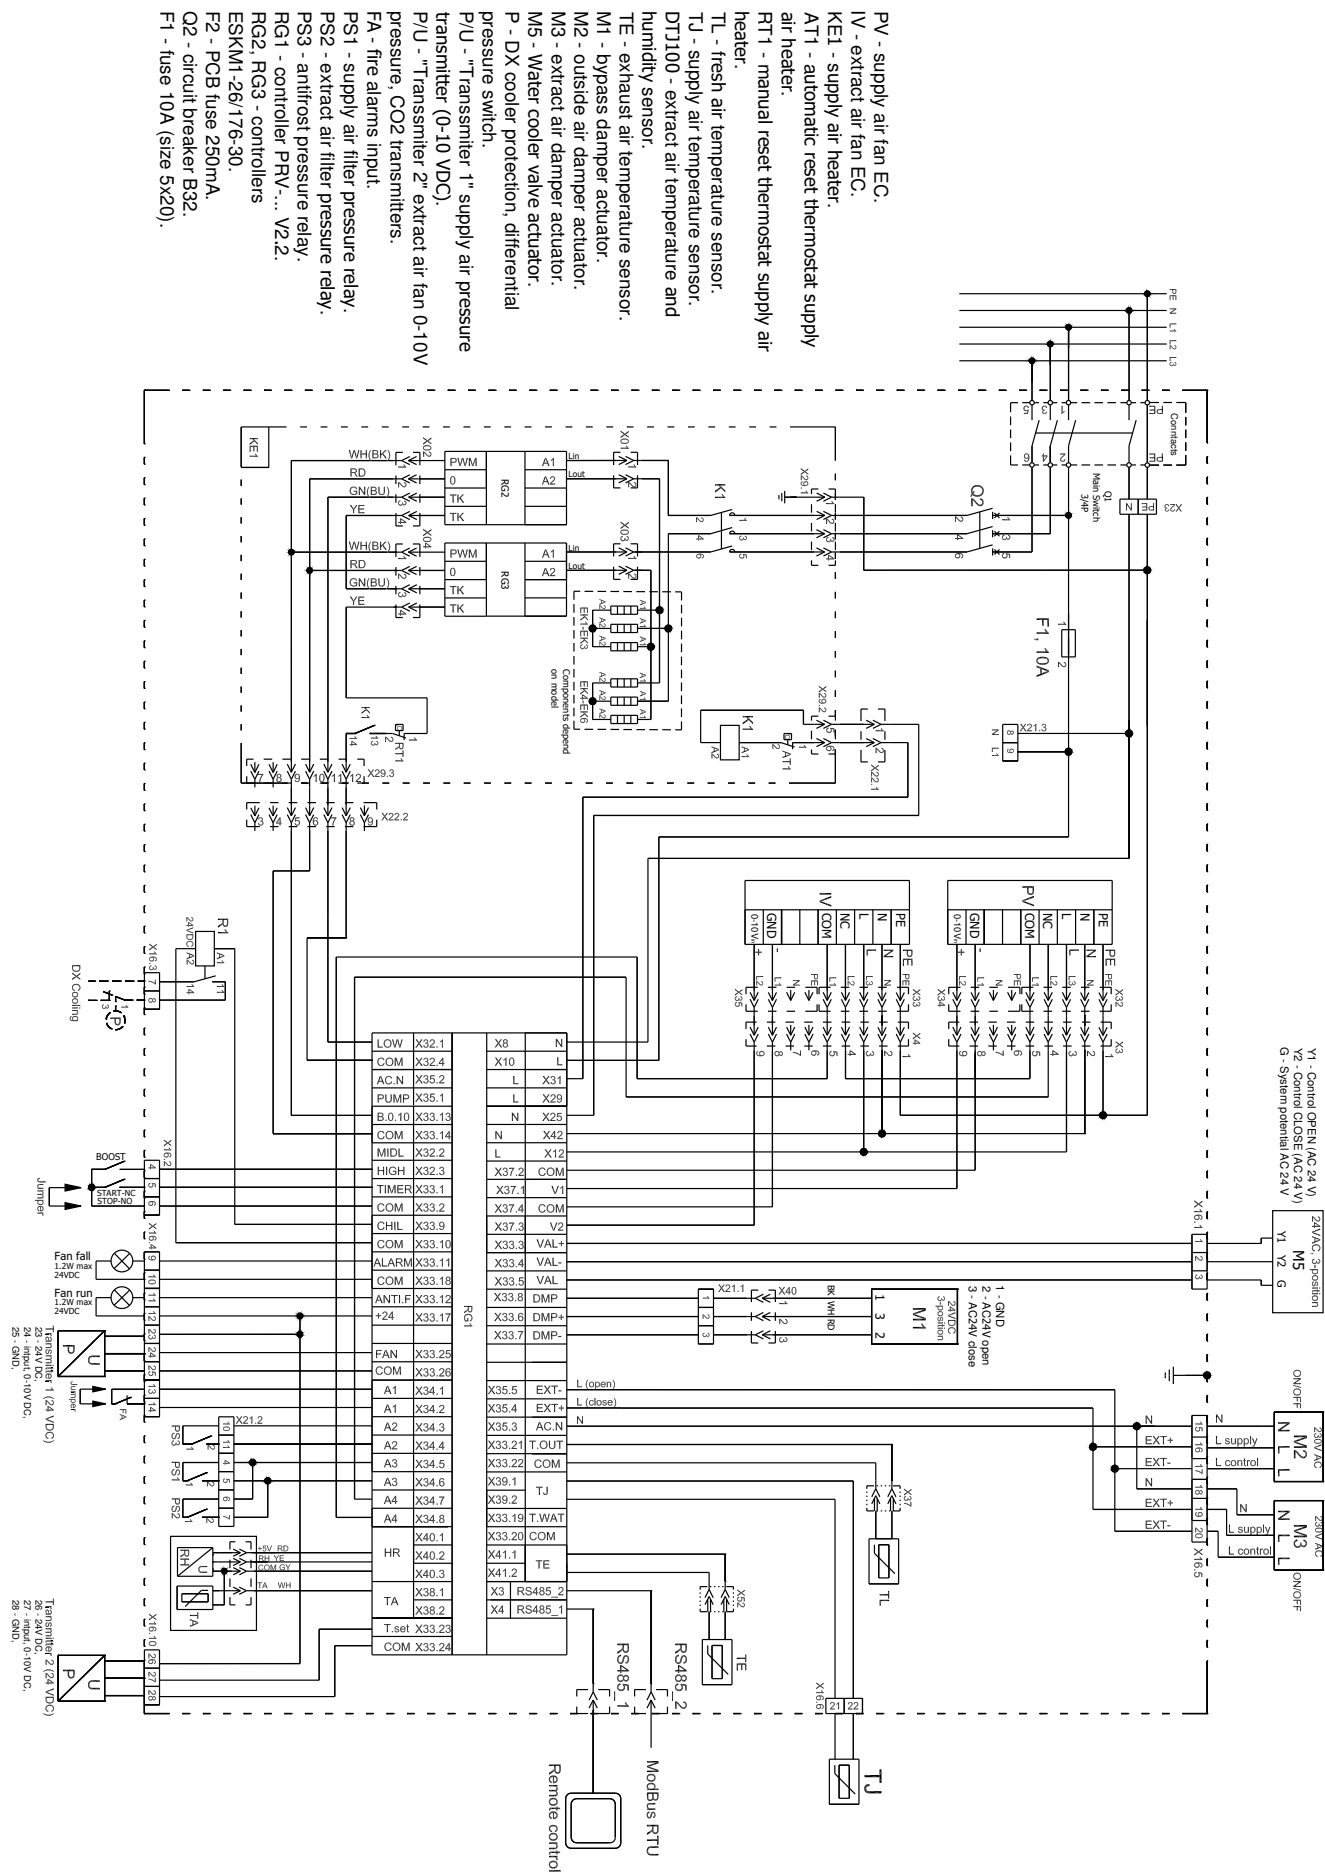


Figure 8.8.5. AmberAir Compact RIS 1900 PE 6.0/12.0 EKO 3.0; AmberAir Compact RIS 2500 PE 4.5/9.0/18.0 EKO 3.0

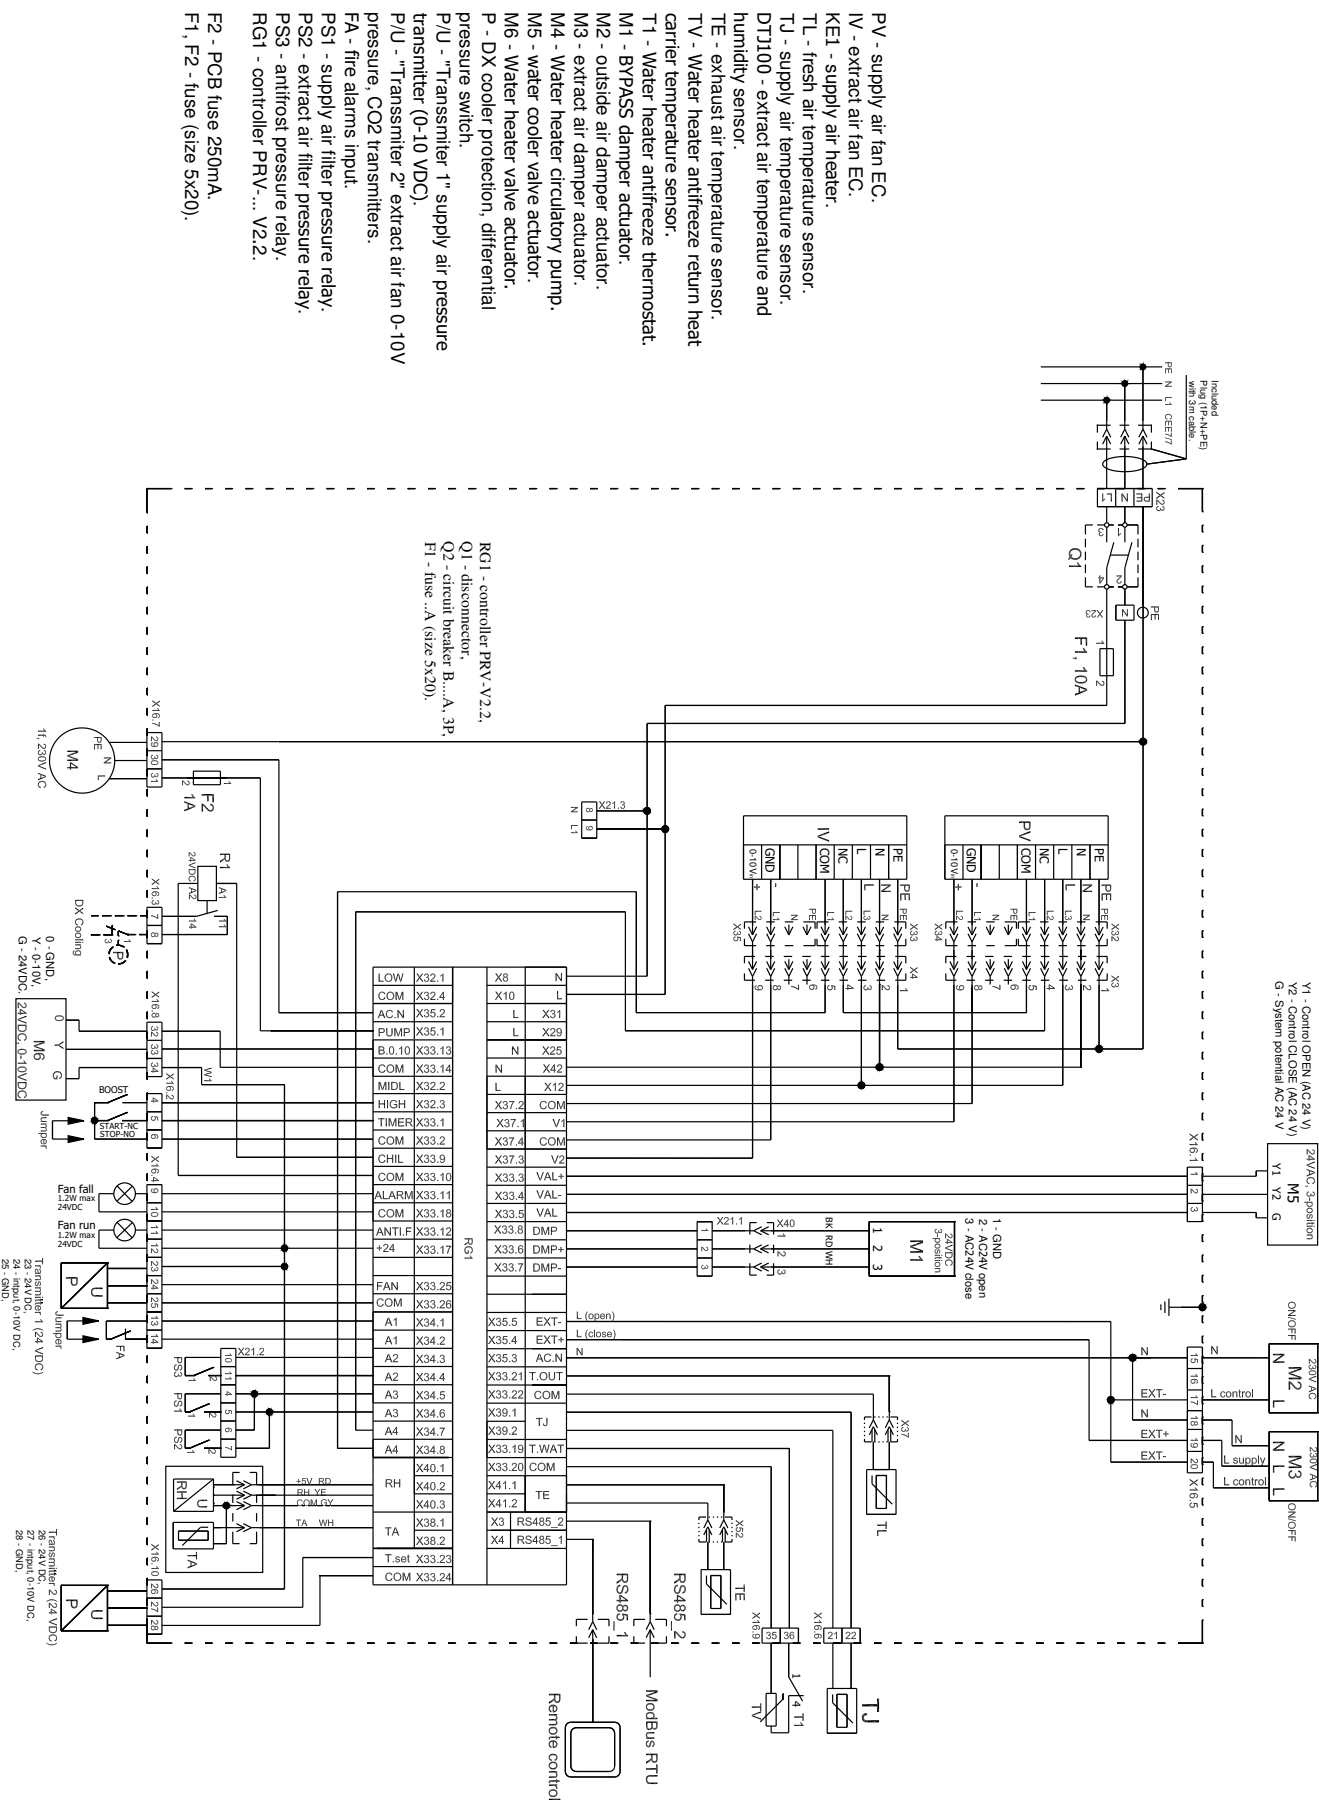


Figure 8.8.6. AmberAir Compact RIS 1900-2500 PW EKO 3.0



## 9. POSSIBLE FAULTS AND TROUBLESHOOTING

FAILURE	CAUSE	EXPLANATION / CORRECTIVE ACTIONS
The unit is not operating	No supply voltage	Check whether the device is connected to the power network.
	The protection device is off or a current leakage relay is active (if installed by the installer)	Switch on only if the unit condition has been evaluated by a qualified electrician. If the system failed, the failure MUST BE rectified prior to switching the system on.
The air supply heater or pre-heater is not operating or malfunctioning (if installed)	Too low airflow in air ducts activates automatic protection	Check if the air filters are not clogged. Check if the fans are rotating.
	Manual safety device is activated	Possible heater or unit failure. MUST contact the servicing staff for failure detection and its elimination.
Too low airflow at rated fan speed	Clogged supply and/or extract air filter(s)	Filter replacement needed.
The filters are clogged and no message is shown on the remote control	Wrong time on filter timers or their switch is broken, or its pressure is set improperly	Shorten filter timer time till the message of clogged filters appears or replace the pressure switch of the filters, or set their proper pressure.

## 10. ECODESIGN DATA TABLE

AMBERAIR COMPACT RIS EKO 3.0		1200 P	1900 P	2500 P
Topology		Bidirectional	Bidirectional	Bidirectional
Type of heat recovery system		Recuperative	Recuperative	Recuperative
Type of drive		Variable	Variable	Variable
Thermal efficiency (EN308)	[ % ]	82	85	84
Nominal NRVU flow rate	[ m³/s ]	0,23	0,29	0,45
Effective electric power input	[ kW ]	0,46	0,44	0,71
SFPint	[ W/(m³/s) ]	978	593	734
Maximum internal SFP	[ W/(m³/s) ]	1315	1413	1355
Face velocity	[ m/s ]	1,28	0,95	1,04
Nominal external pressure	[ Pa ]	250	250	250
Internal pressure drop of ventilation components	[ Pa ]	235/262	210/115	251/181
Static efficiency of fans used in accordance with Regulation (EU) No 327/2011	[ % ]	46/56	58/50	59/58
Declared maximum internal leakage rates	[ % ]	3	3	3
Declared maximum external leakage rates (CAL(R) @ +400 Pa)	[ % ]	1	1	1
Declared maximum external leakage rates (CAL(R) @ -400 Pa)	[ % ]	1	1	1
Filter class		E	E	E
Visual filter warning		Pressure device	Pressure device	Pressure device
Casing sound power level (Lwa)	[ dB(A) ]	57	60	57
ErP Compliance		2018	2018	2018
Internet address for disassembly instructions			<a href="https://select.salda.it">https://select.salda.it</a>	

## 11. DECLARATION OF CONFORMITY

Manufacturer

**SALDA, UAB**  
**Ragainės g. 100**  
**LT-78109 Šiauliai, Lithuania**  
**Tel.: +370 41 540415**  
**www.salda.lt**

Hereby confirms that the following products - Air handling units:

**AmberAir Compact RIS \* EKO 3.0**

(where by „\*“ indicates possible unit installation type and modification)

Provided it was delivered and installed in the facility in accordance with the included installation instructions, comply with all applicable requirements in the following directives:

**Machinery Directive 2006/42/EC**  
**EMC Directive 2014/30/EU**  
**Low Voltage Directive 2014/35/EU**  
**Ecodesign Directive 2009/125/EC**  
**RoHS 2 Directive 2011/65/EU**

The following regulations are applied in applicable parts:

**Ecodesign requirements for ventilation units Nr. 1253/2014**  
**Energy labelling of residential units Nr. 1254/2014**

The following harmonized standards are applied in applicable parts:

13141-7:2021 - Ventilation for buildings - Performance testing of components/products for residential ventilation - Part 7: Performance testing of a mechanical supply and exhaust ventilation units (including heat recovery) for mechanical ventilation systems intended for single family dwellings.  
 EN308-2022 - Heat exchangers. Test procedures for establishing performance of air to air heat recovery components.  
 EN ISO 12100:2012 - Safety of machinery - General principles for design - Risk assessment and risk reduction.  
 EN 60204-1:2018 - Safety of machinery - Electrical equipment of machines - Part 1: General requirements.  
 EN 60335-1:2012 - Household and similar electrical appliances. Safety. Part 1: General requirements.  
 EN 60529:1999/A2:2014/AC:2019 - Degrees of protection provided by enclosures (IP code).  
 EN 61000-6-1:2019 - Electromagnetic compatibility (EMC). Part 6-1: Generic standards - Immunity for residential, commercial and light-industrial environments.  
 EN 61000-6-4:2019 - Electromagnetic compatibility (EMC). Part 6-4: Generic standards - Emission standard for industrial environments.

Should any alterations be made in the products, this declaration will no longer apply.

**Quality:** SALDA UAB activities are in line with the international quality management system standard **ISO 9001:2015**.

Date 2024-09-02



Giedrius Taujenis  
 Product Manager

## 12. WARRANTY

1. All equipment manufactured in our factory is checked in operating conditions and tested before delivery. The test protocol is supplied together with the unit. The equipment is shipped in good working condition to the end client. The unit is warranted for the period of two years from the date of the invoice.
2. If equipment is found to have been damaged during transportation, a claim should be made against the carrier, as we assume no responsibility for such damage.
3. This warranty does not apply:
  - 3.1. when transportation, storage, installation and maintenance instructions of the unit are violated;
  - 3.2. when the equipment is improperly maintained, mounted - inadequate maintenance;
  - 3.3. when the equipment without our knowledge and permission has been upgraded or unskilled repairs were made;
  - 3.4. when the unit was used not for its original purpose.
  - 3.5. Company SALDA UAB is not responsible for potential loss of property or personal injury in cases where the Air Handling unit is manufactured without the control system and the control system is installed by the client or the third parties. The manufacturer's warranty does not cover devices that will be damaged by installing the control system.
4. This warranty does not apply to these malfunction cases:
  - 4.1. mechanical damage;
  - 4.2. damage caused by entering outside objects, materials and liquids;
  - 4.3. damage caused by natural disasters, accidents (voltage change in the electricity network, lightning, etc.).
5. The company assumes no liability for the damage to its products neither directly nor indirectly, if the damage is caused by failure to comply with the installation and mounting regulations, deliberate or careless users or third-party behaviour.

These conditions are readily discernible when the equipment is returned to our factory for inspection.

If the direct client determines that equipment is found to be faulty, or a breakdown occurred, he should inform the manufacturer within five working days and deliver the equipment to the manufacturer. Delivery costs should be covered by the customer.



**The manufacturer reserves the right to change this technical passport at any time without prior notice if some typographic errors or inaccurate information is found, as well as after improving the apps and/or the devices. Such changes will be included in the new issues of the technical passport. All illustrations are just for information and thus may differ from the original device. The newest manual version is available at <https://select.salda.lt>**

### 12.1. LIMITED WARRANTY COUPON

*Warranty term*

**24 months\***

I received the complete package and technical manual of the product ready for usage. I have read the warranty terms and conditions and agree with them:

.....  
Customer's signature

\*Refer to WARRANTY CONDITIONS

*Dear User, we appreciate your choice and do hereby guarantee that all ventilation equipment manufactured by our Company is inspected and thoroughly tested. An operational and high-quality product is sold to the direct buyer and shipped from the territory of the factory. It is provided with a 24-month warranty from the issue date of the invoice.*

*Your opinion is important to us, thus we always look forward to hearing your comments, feedback, or suggestions regarding technical and operational characteristics of the Products.*

*In order to avoid any misunderstandings, please read the instructions for installation and operation of the product as well as other technical documents of the product carefully. The number of the Limited Warranty Coupon and the serial number of the product specified on the silver identification sticker attached to the housing must match.*

*The Limited Warranty Coupon shall be valid provided that the seller's stamps and records are clear. It is not allowed to change, delete, or rewrite the data specified on it in any manner – such a coupon shall be invalid.*

*With this Limited Warranty Coupon the manufacturer confirms his obligations to implement the imperative requirements established by effective laws on protection of consumer rights in the event of identification of any defects of the products.*

*The manufacturer reserves the right to refuse provision of free warranty servicing in cases when the warranty conditions listed below are disregarded.*



## PRODUCT MAINTENANCE TABLE

Product name\*

SERIAL number\*

Installation	Interval	Date
Fan cleaning	Once per year**	
Heat-exchanger cleaning	Once per year**	
Filter replacement	Every 3-4 months**	

\* - Look at the product label.

\*\* - At least.



NOTE. The customer shall be required to complete the Product Maintenance Table.

## MANUALS IN OTHER LANGUAGES

DE



[https://select.salda.lt/  
file/aa-compact-ris1200-  
2500p-eko-de](https://select.salda.lt/file/aa-compact-ris1200-2500p-eko-de)

DK



[https://select.salda.lt/  
file/aa-compact-ris1200-  
2500p-eko-dk](https://select.salda.lt/file/aa-compact-ris1200-2500p-eko-dk)

FR



[https://select.salda.lt/  
file/aa-compact-ris1200-  
2500p-eko-fr](https://select.salda.lt/file/aa-compact-ris1200-2500p-eko-fr)

LT



[https://select.salda.lt/  
file/aa-compact-ris1200-  
2500p-eko-lt](https://select.salda.lt/file/aa-compact-ris1200-2500p-eko-lt)

NL



[https://select.salda.lt/  
file/aa-compact-ris1200-  
2500p-eko-nl](https://select.salda.lt/file/aa-compact-ris1200-2500p-eko-nl)

PL



[https://select.salda.lt/  
file/aa-compact-ris1200-  
2500p-eko-pl](https://select.salda.lt/file/aa-compact-ris1200-2500p-eko-pl)

RU



[https://select.salda.lt/  
file/aa-compact-ris1200-  
2500p-eko-ru](https://select.salda.lt/file/aa-compact-ris1200-2500p-eko-ru)



MAN000534



Ragainės g. 100  
Šiauliai LT-78109, LITHUANIA

+370 41 540 415  
office@salda.lt